


Do not discard packaging until product has been successfully installed.

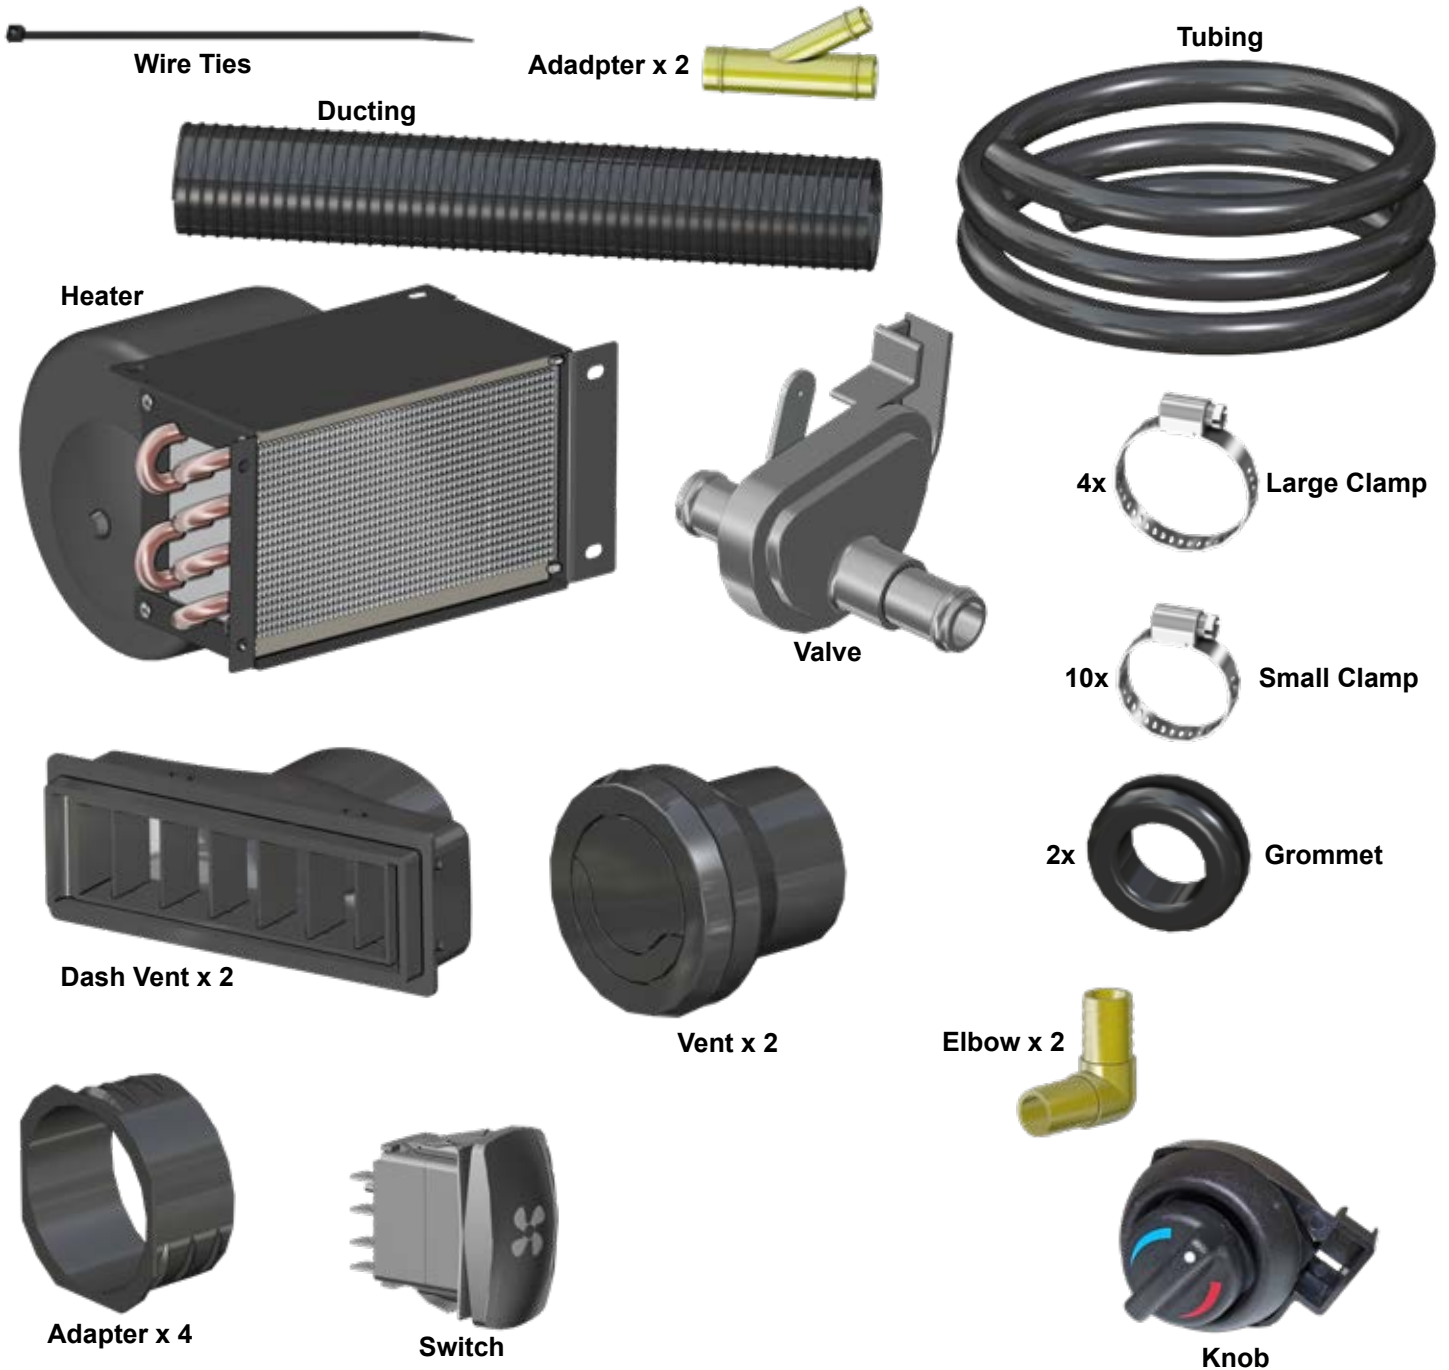

**Need help with your installation?**


✉ sales@superatv.com    🌐 www.superatv.com

☎ 1-855-743-3427    🕒 8:00am - 8:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

**Read instructions and view illustrations before beginning.**

*Thank You*  
*For Choosing*  
**SUPERATV**.COM<sup>®</sup>


(kit contents continued)

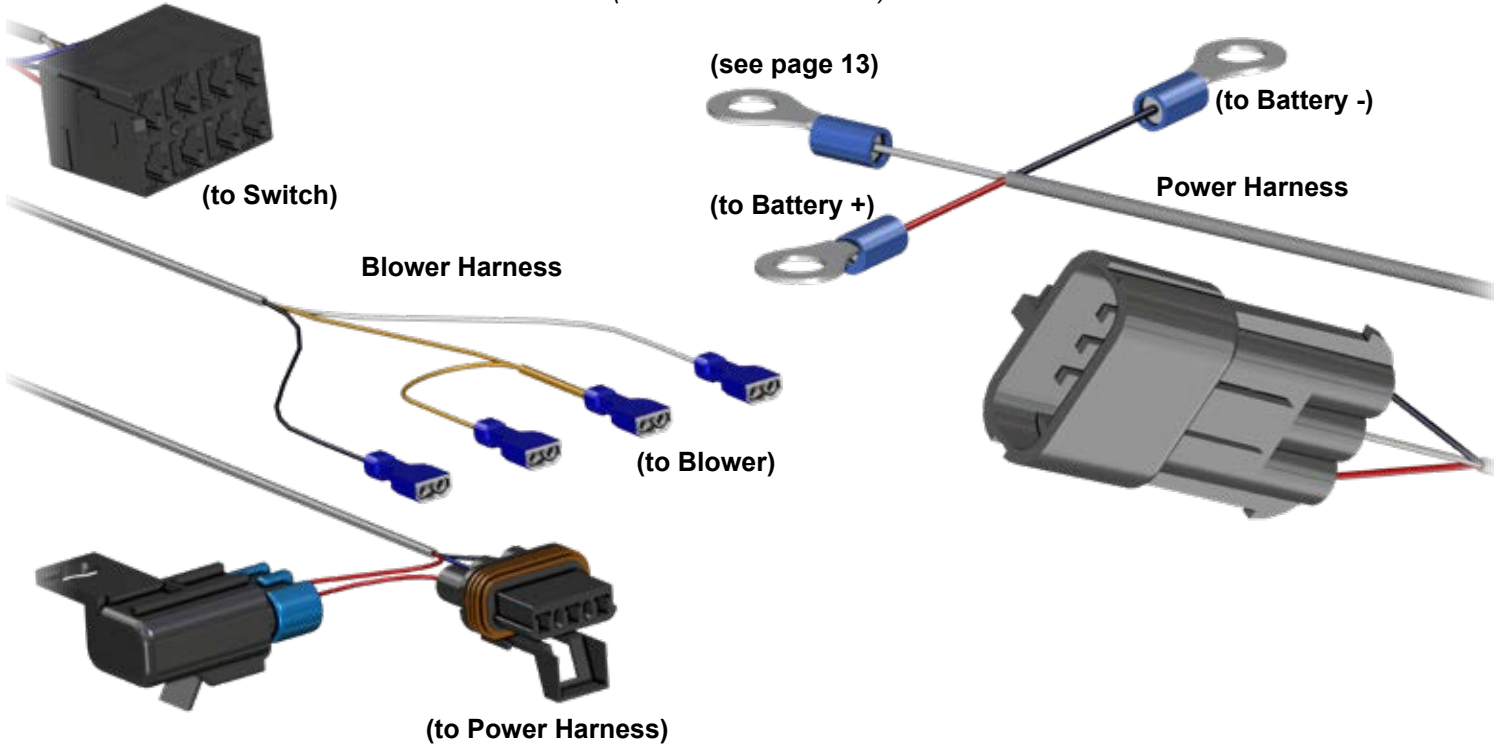


Vent Plate



Support Plate

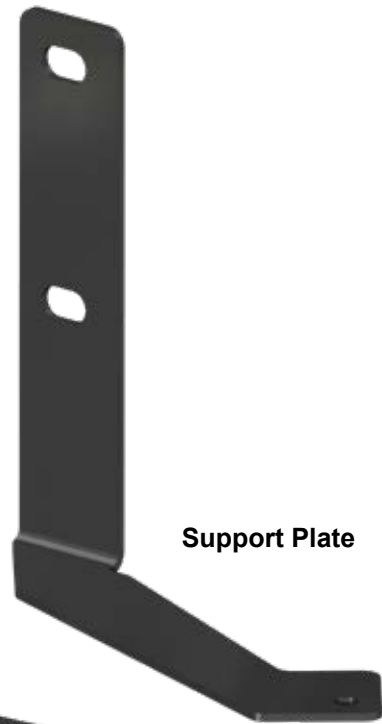

Face Plate

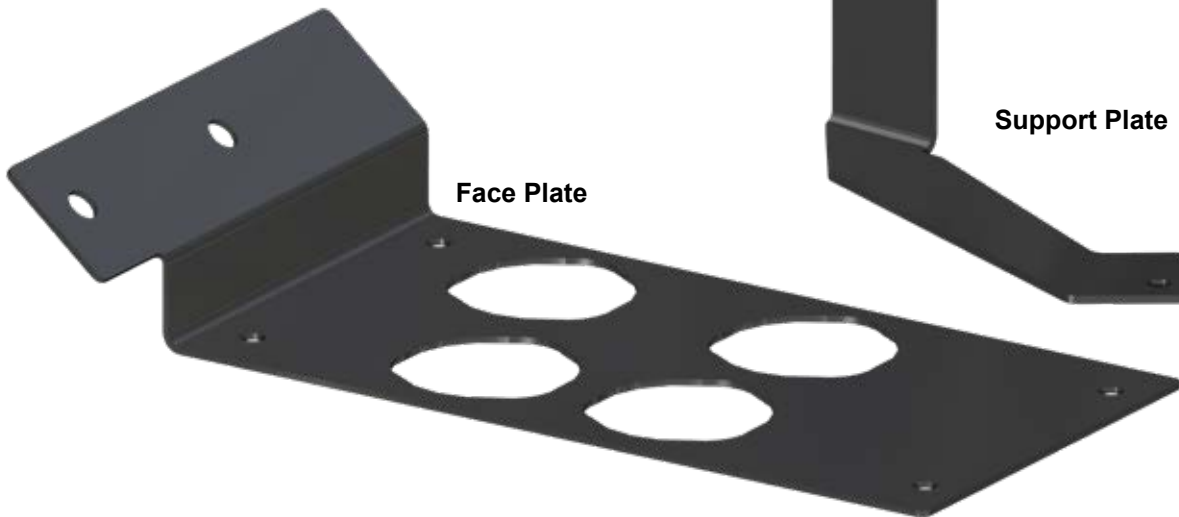

**Liability Statement**

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

- ***Tubeing and Duct lengths are SuperATV recommended. User may install components in other locations. Verify lengths before final installation.***
- ***Check behind areas being drilled for interference.***
- ***Avoid burns and scalding by working on cool vehicles.***
- ***Secure components away from rotating objects.***
- ***Do not tighten mounting hardware until all components are in place.***
- ***Use manufacturers recommended coolant.***
- ***Avoid sharp bends when installing Tubeing.***
- ***Verify that no leaks are present after installation.***

- 
- 
- Separate Vents and set aside.



- Place top of Vent onto Lower Dash. Center in general area shown and mark location.




- Cut Ø2-1/2" hole through plastic.
- Install Vent.



- Place Vent Plate into location shown and mark mounting holes onto plastic.
- Drill holes through plastic.



- Install Vent to Vent Plate.
- Secure Vent Plate with Rivets.

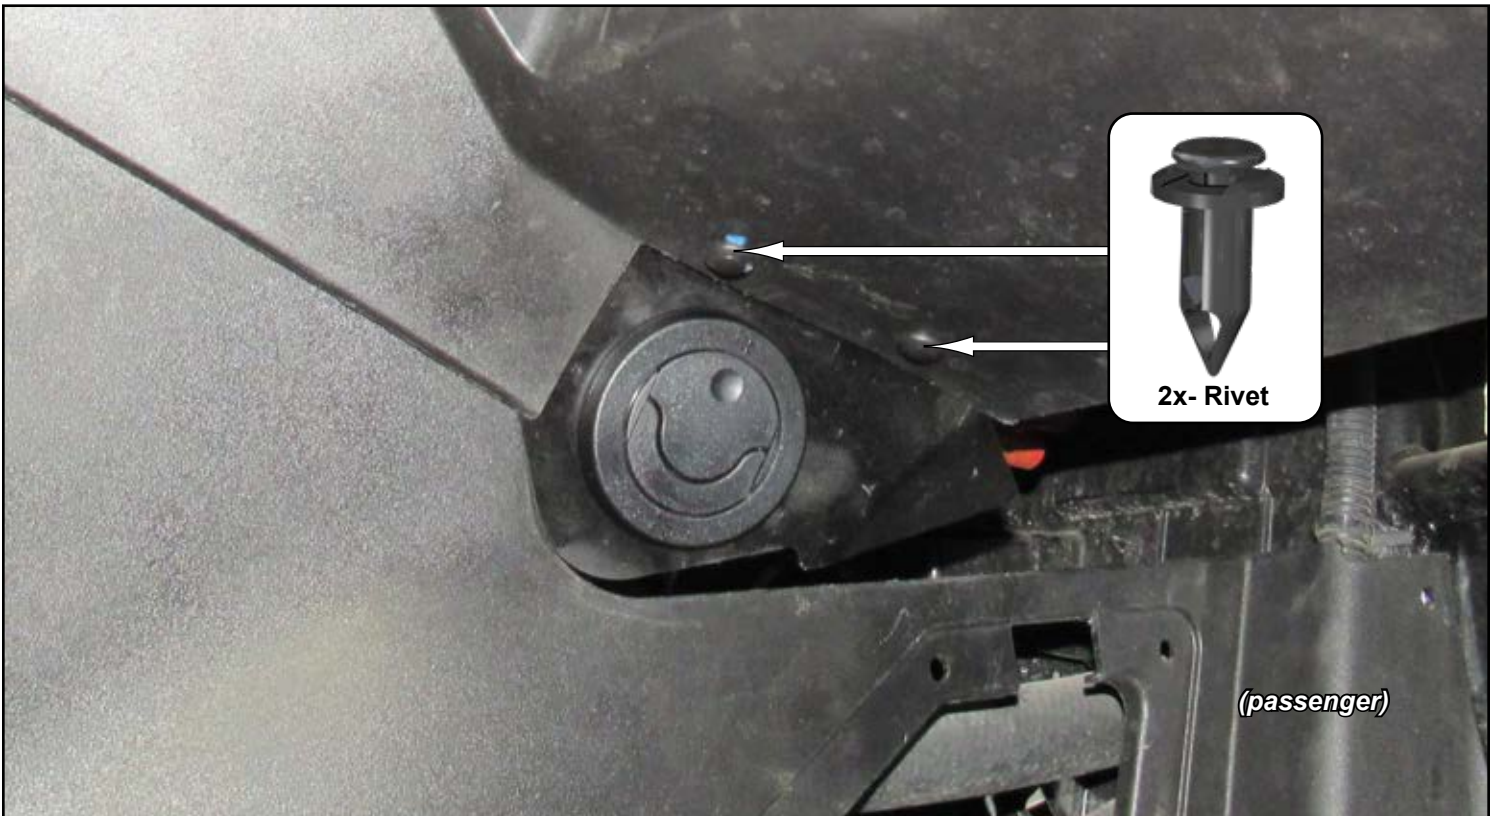



- Locate factory indentions in Cover and cut out Dash Vent locations.



- Remove Cover.
- Install Dash Vents to new cutouts in Cover.




(Driver Side)




remove Center Console Cover

- Install Adapters to Face Plate.

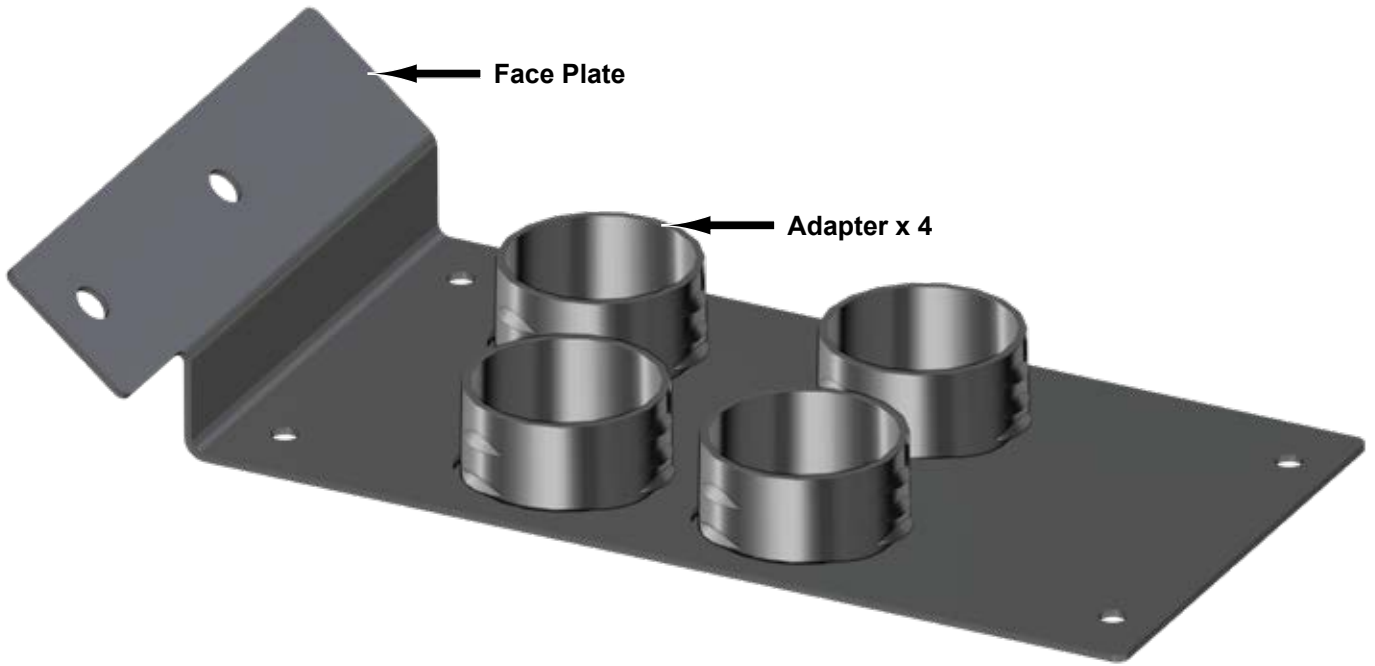


- Secure Face Plate to Heater with hardware shown; tighten.

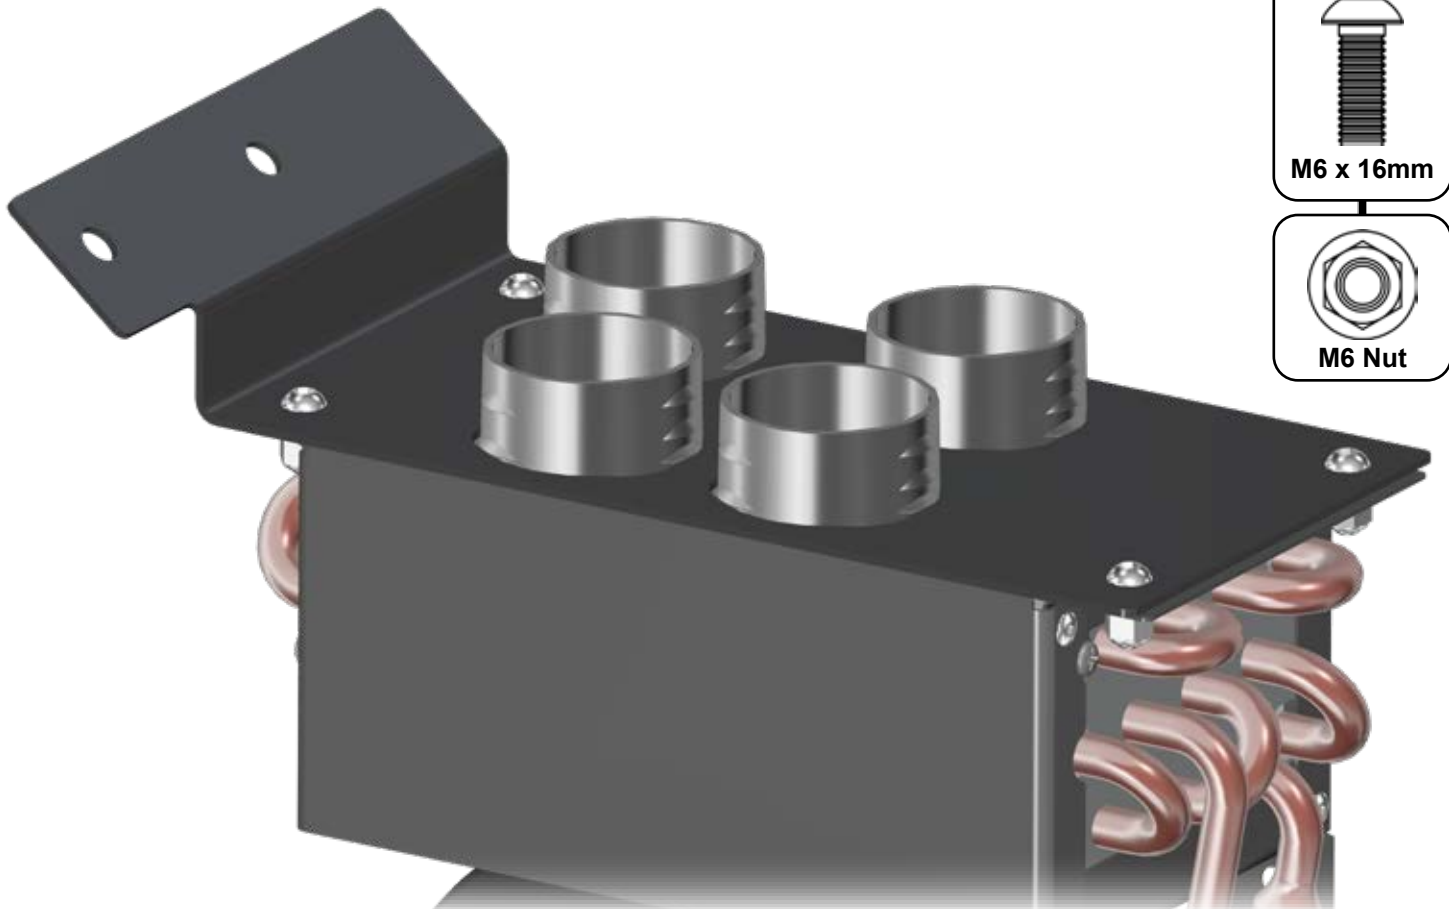




- Secure Support Plate to Heater with hardware shown; snug not tight.

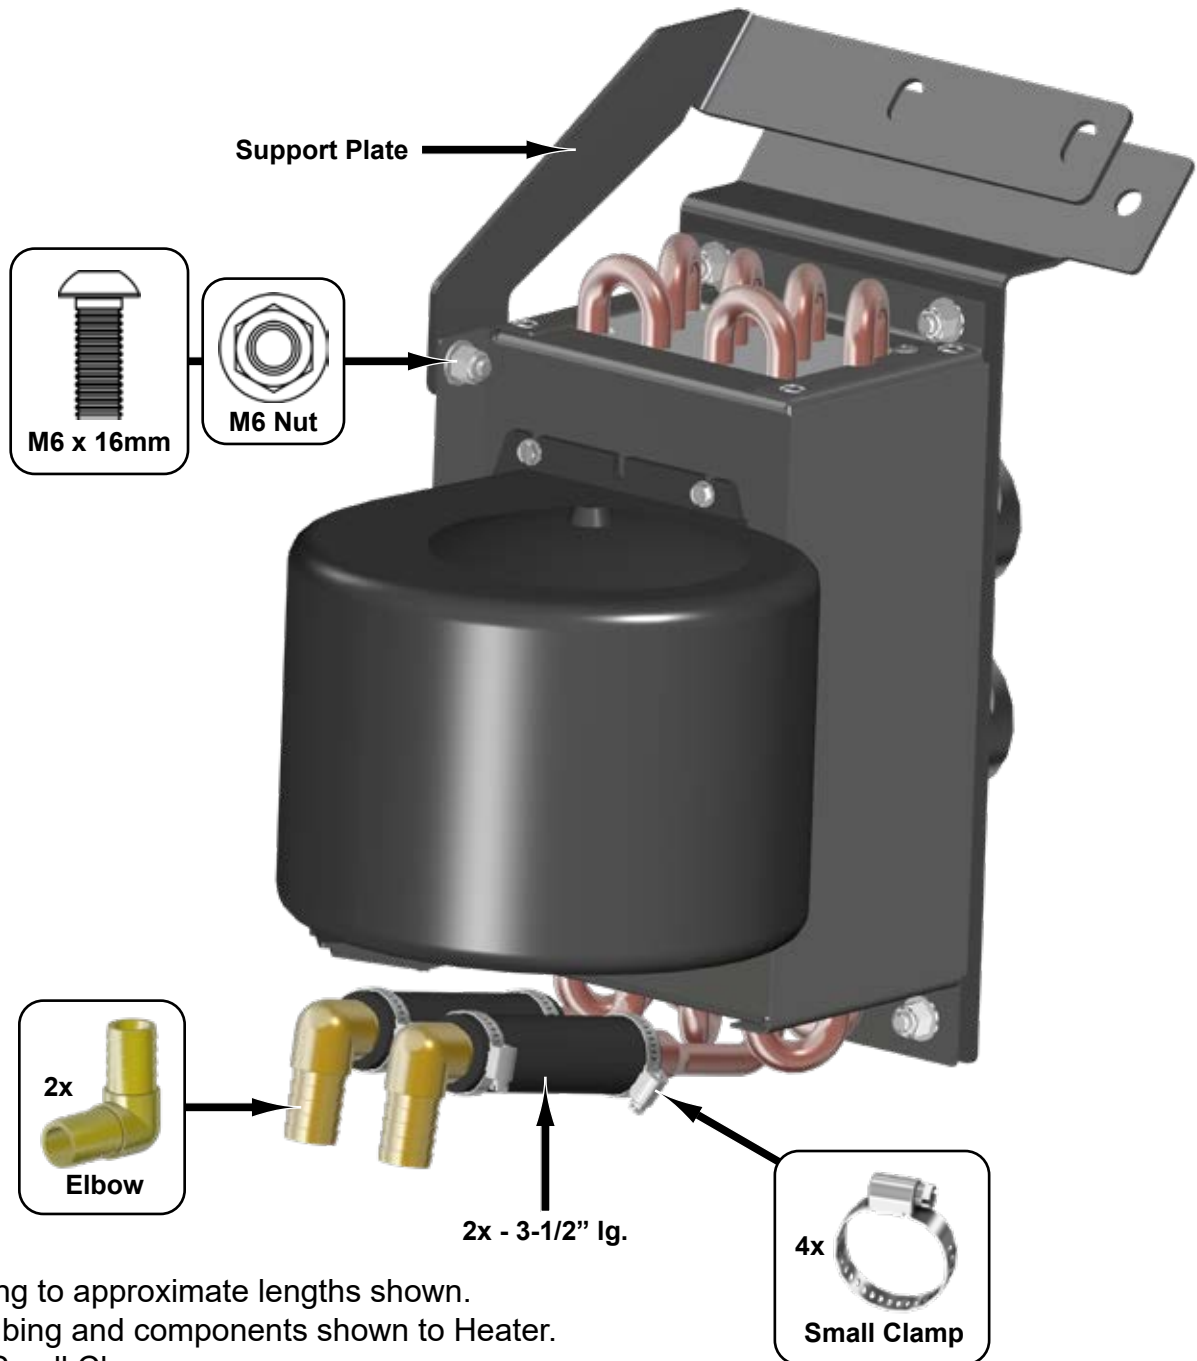


- Cut Tubing to approximate lengths shown.
- Install Tubing and components shown to Heater.
- Tighten Small Clamps.

If a harness is attached to Blower, remove and discard it before attaching provided Blower Harness.

- Connect Blower Harness to Blower.

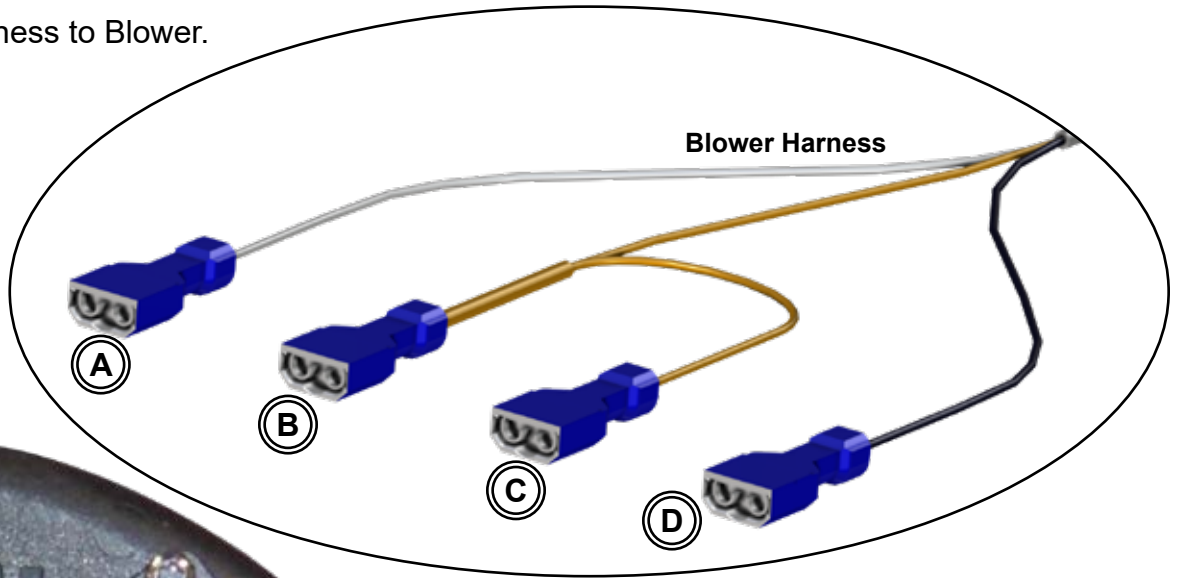



- Mark locations for Grommets and cut (2) Ø1-1/4" holes.

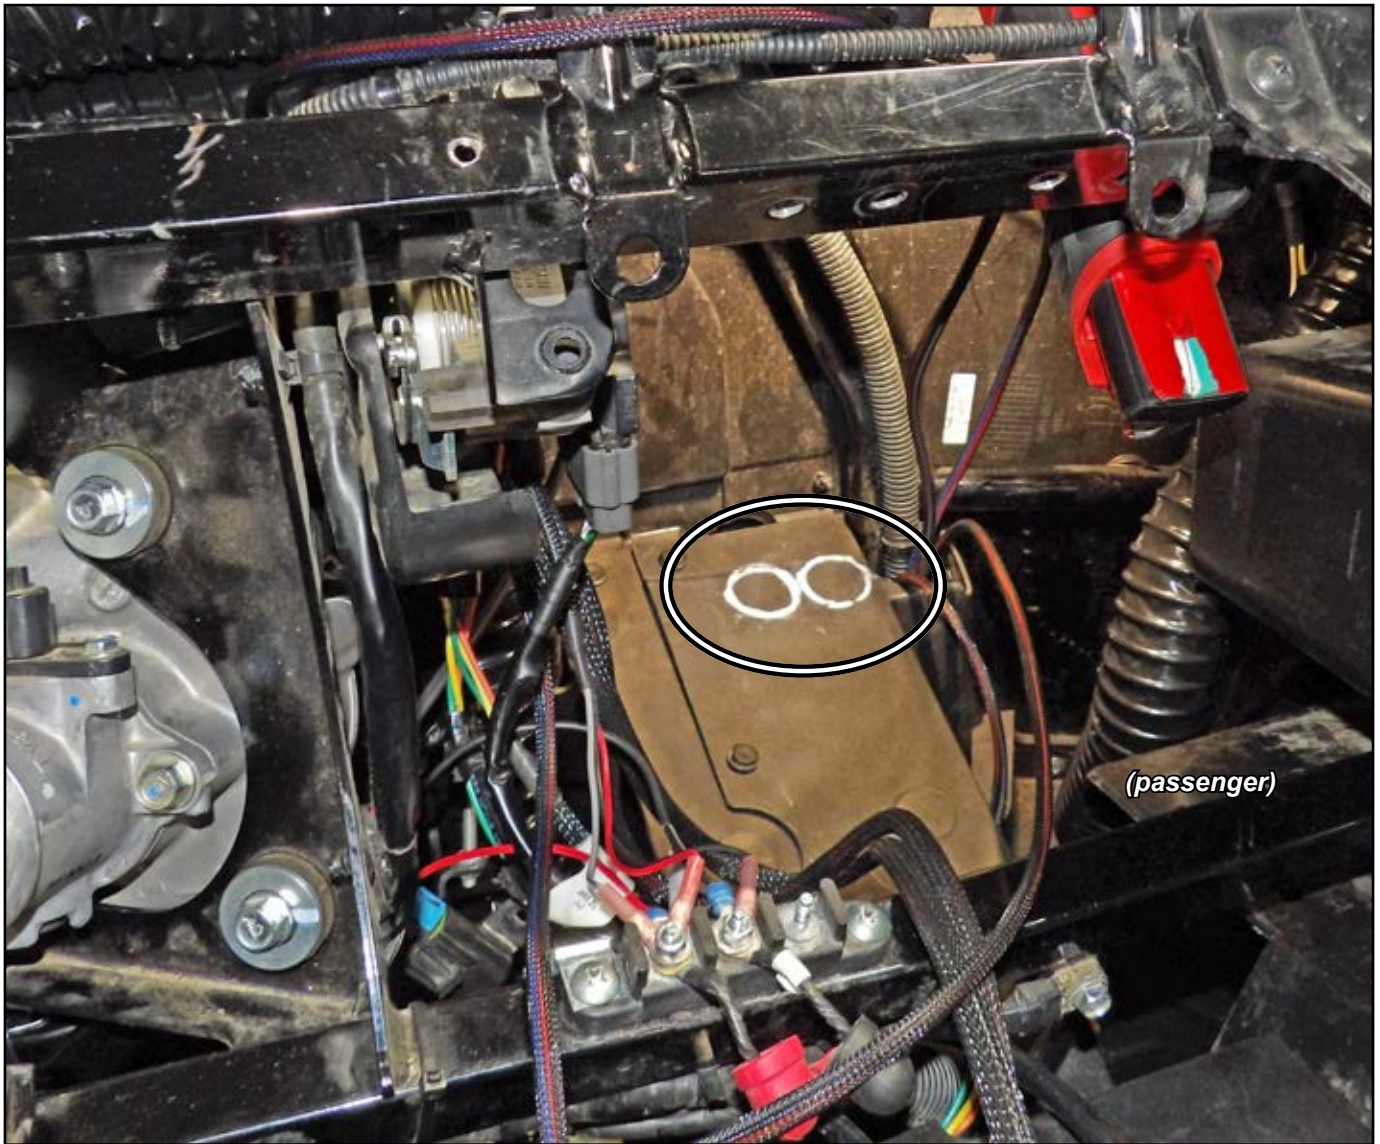

- Install Grommets into new holes.


- Install and secure Heater with hardware shown; tighten all hardware.

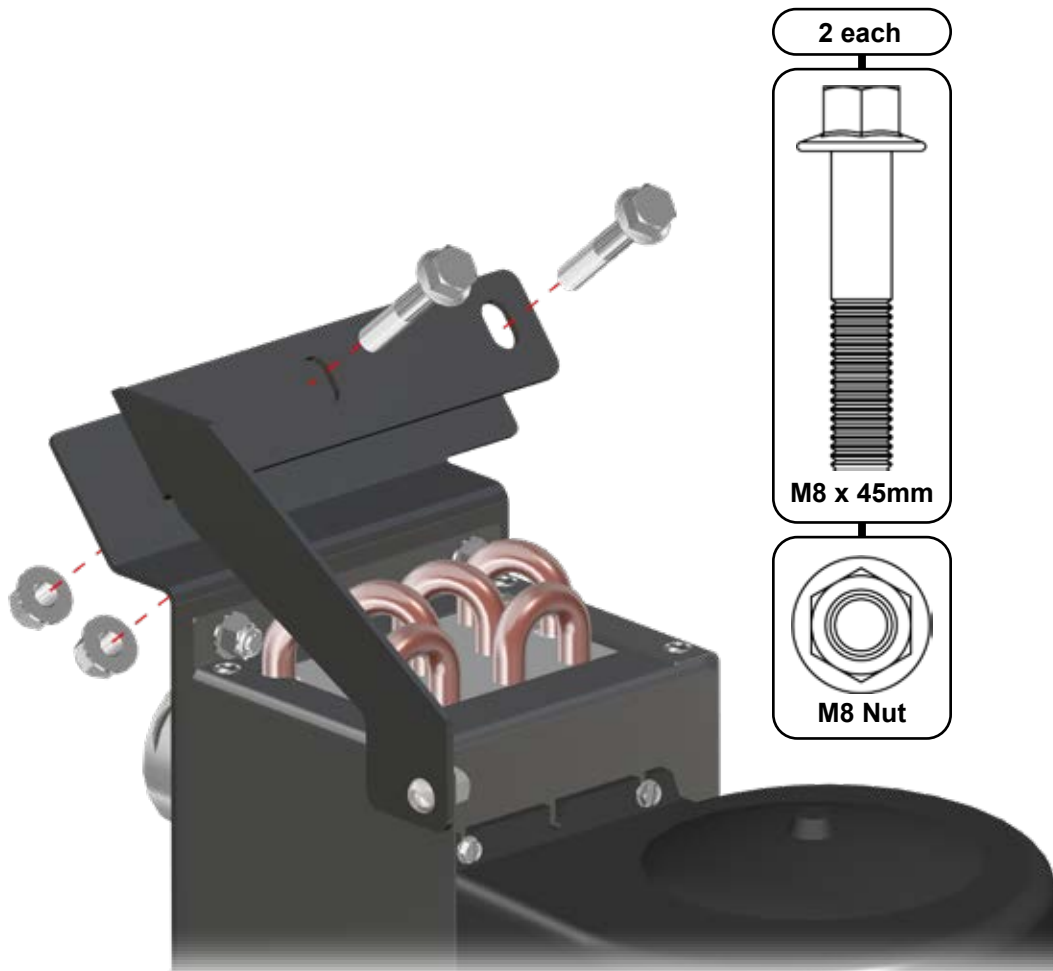

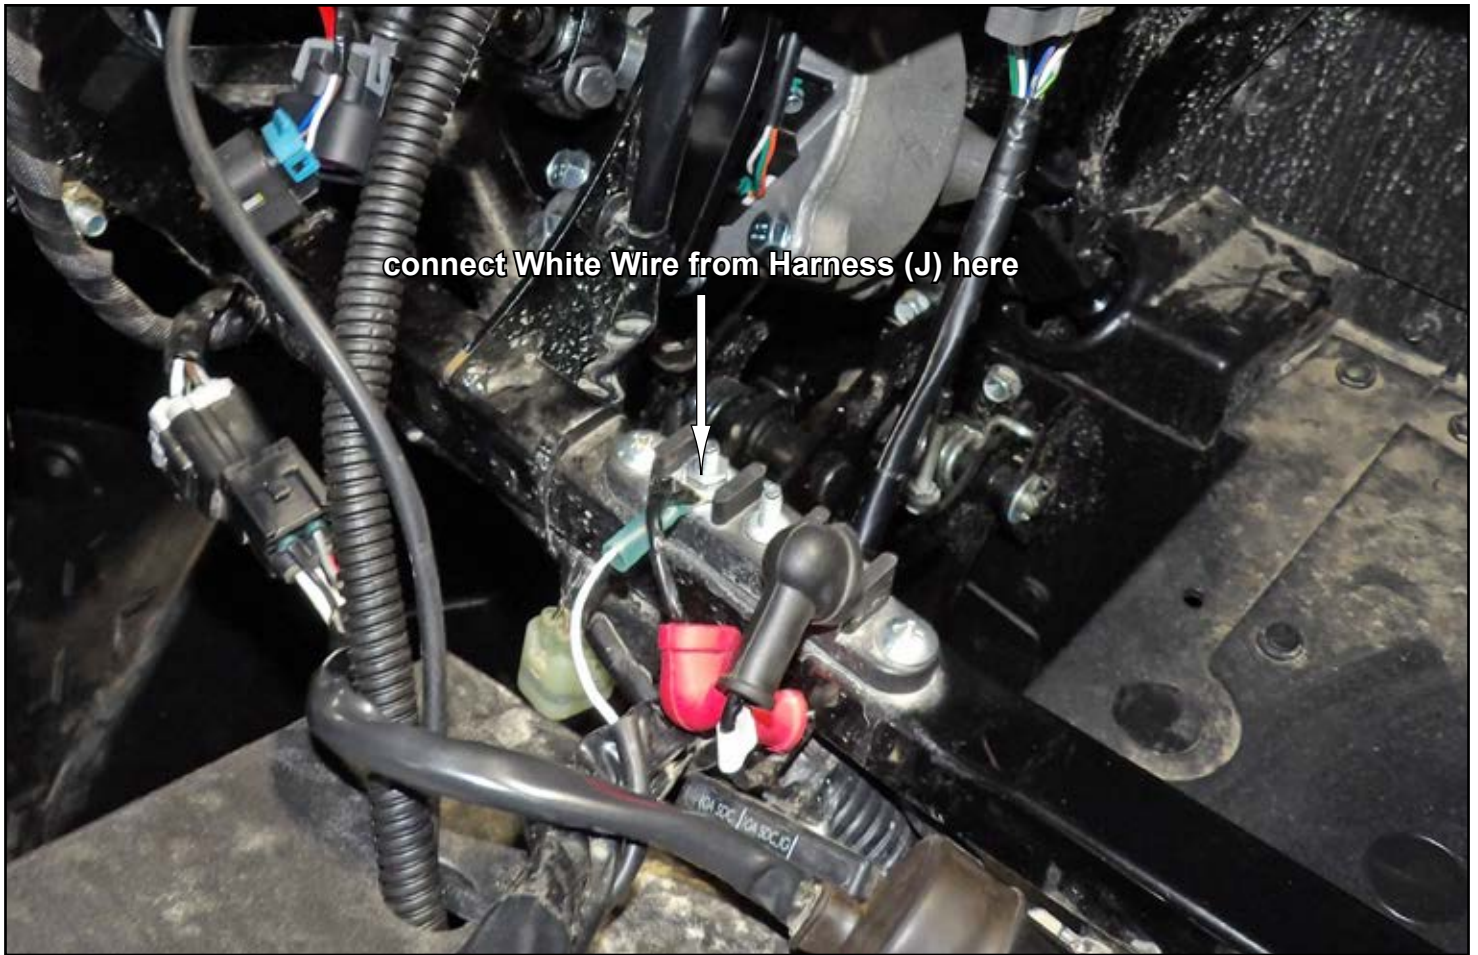


- Cut and install Ducting to Adapters and Vents. Secure with Wire Ties.

# Plumbing

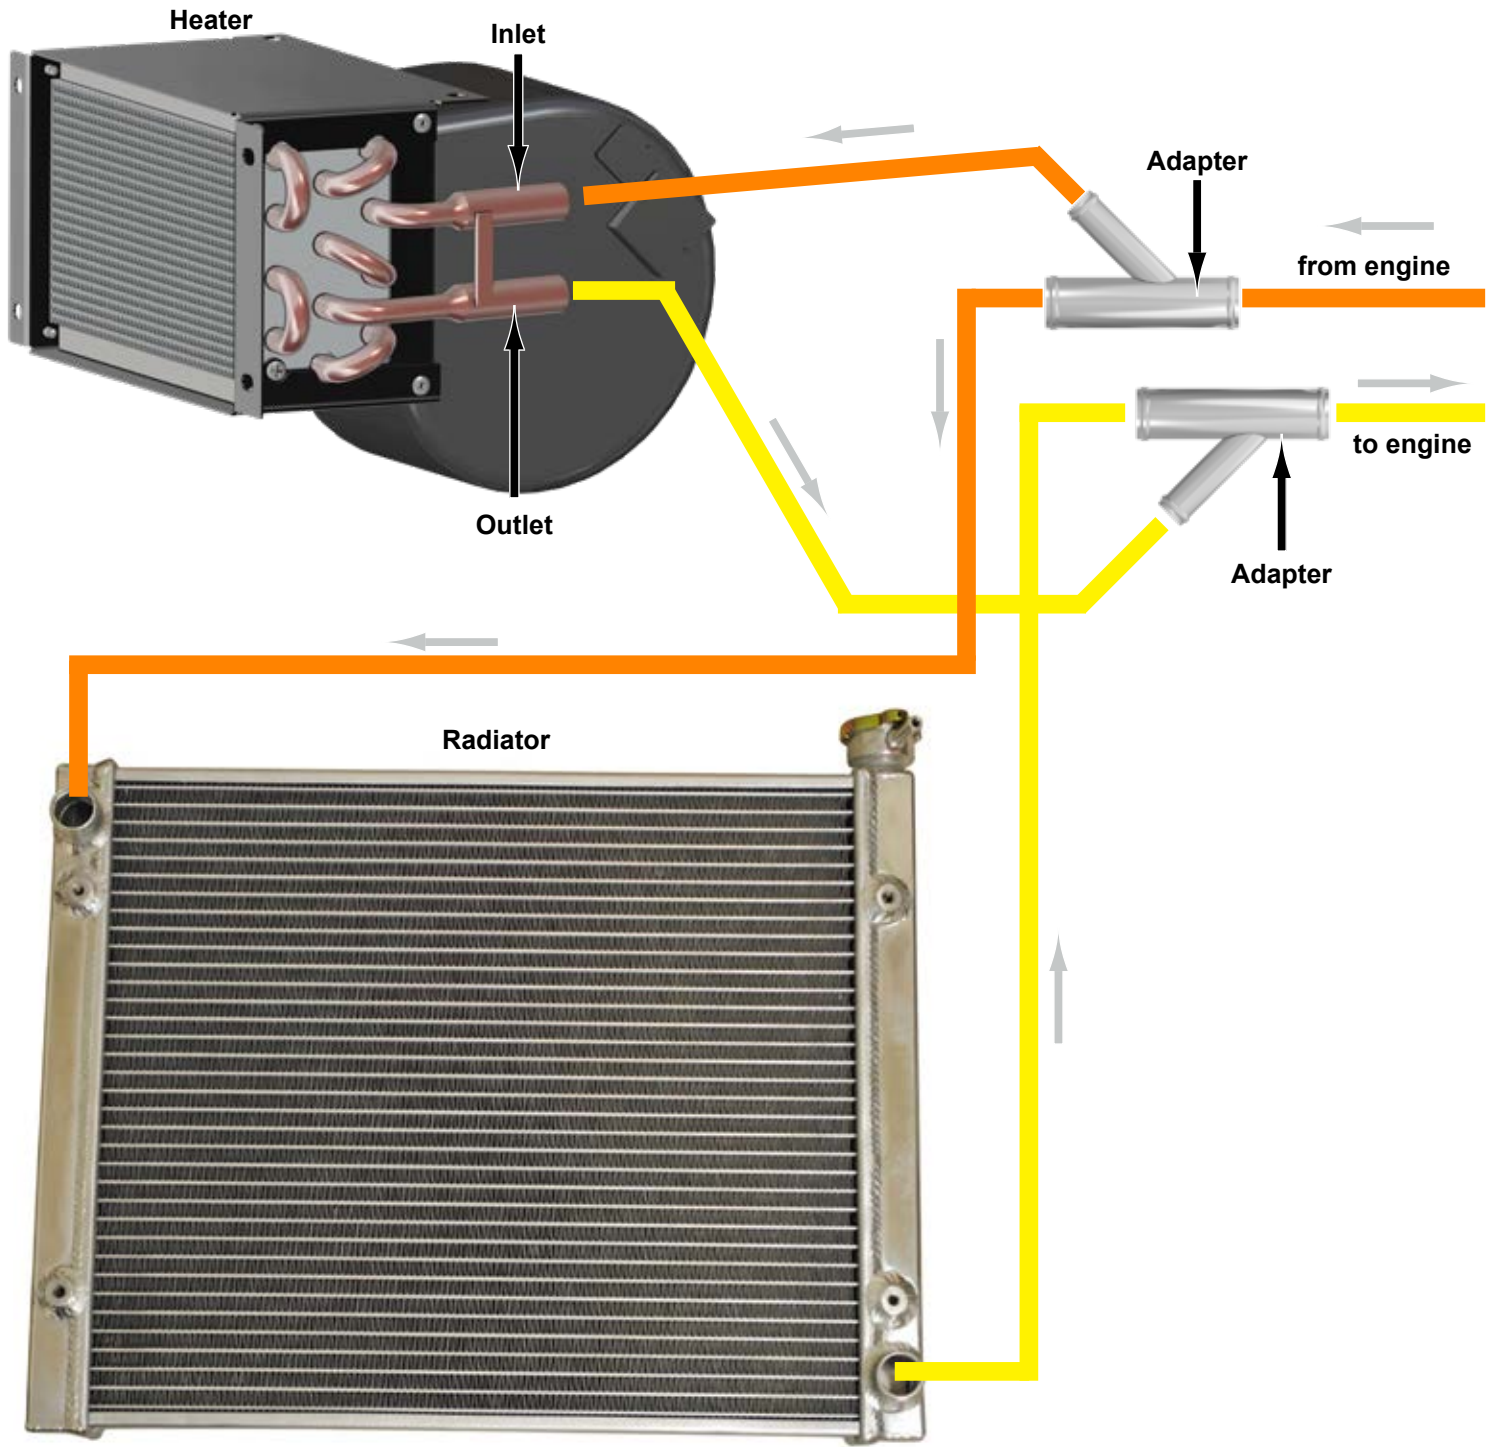

- Make Tubing connections as shown below.


To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.

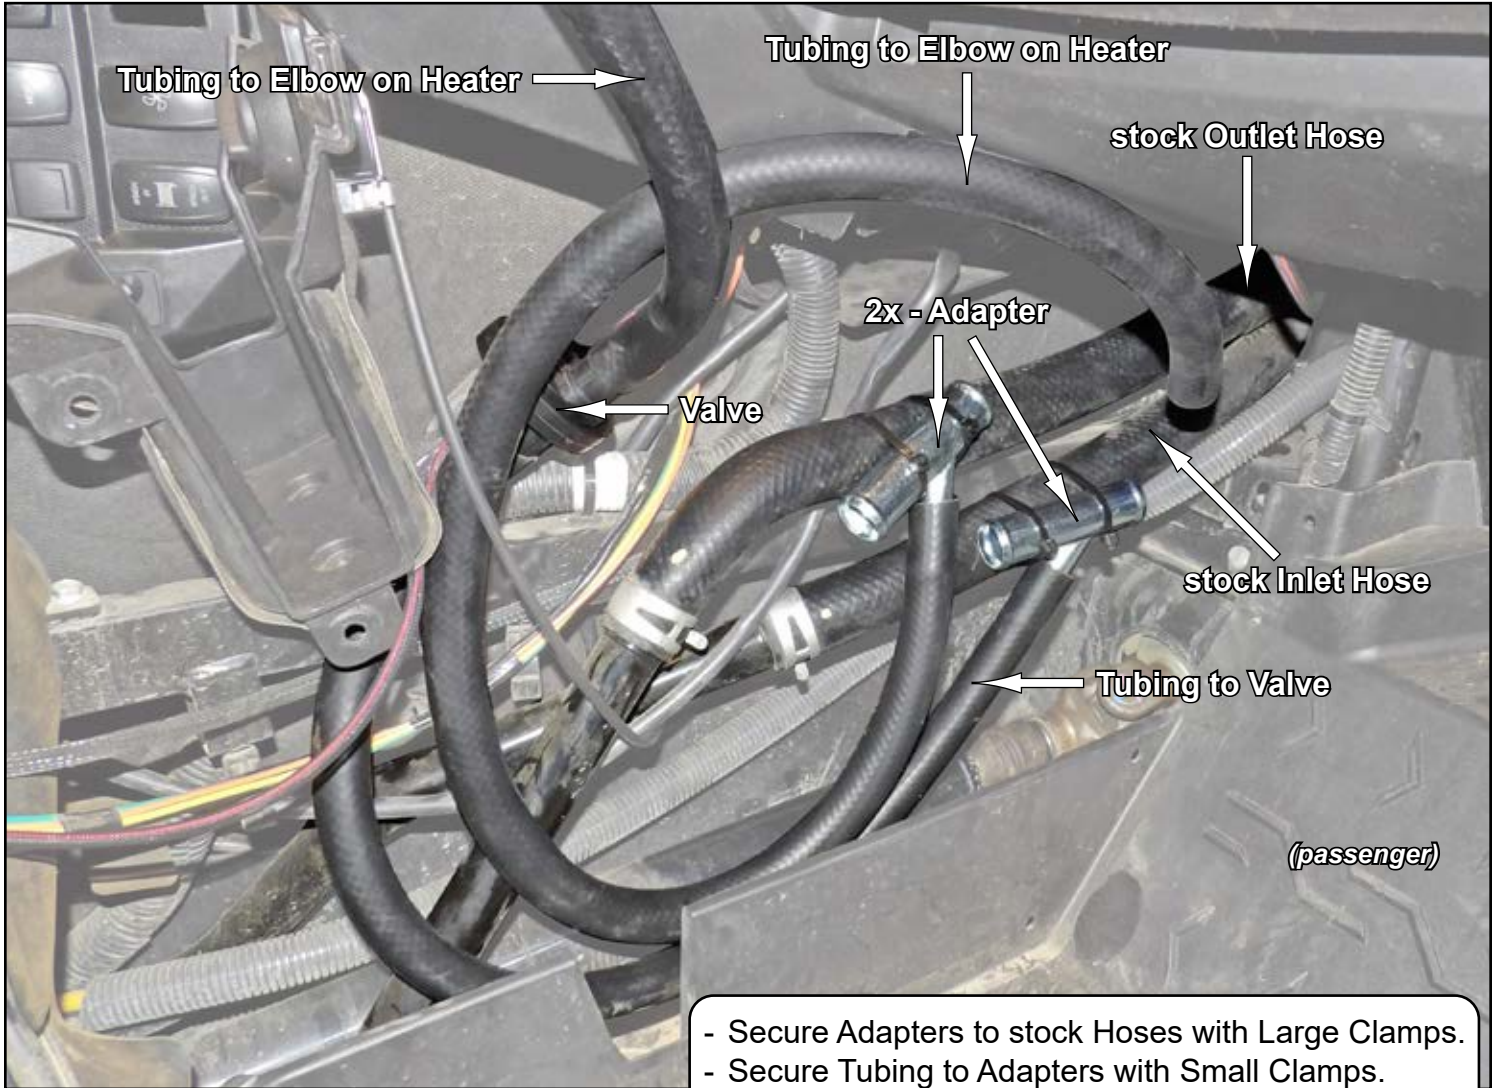

- Secure Adapters to stock Hoses with Large Clamps.
- Secure Tubing to Adapters with Small Clamps.
- Secure Valve to Tubing with Small Clamps.
- Tighten Clamps.

- Follow profile and cut out Knob Template.
- Center on Panel, tape in place, and mark hole locations.

### Knob Template

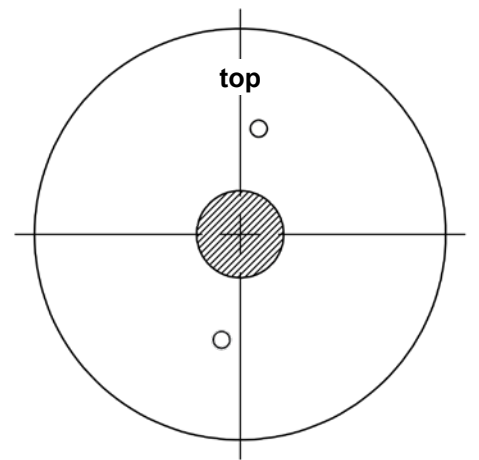


- Separate Knob.



Drill (3) holes through plastic.

- Connect Cable, from Valve, to Knob.

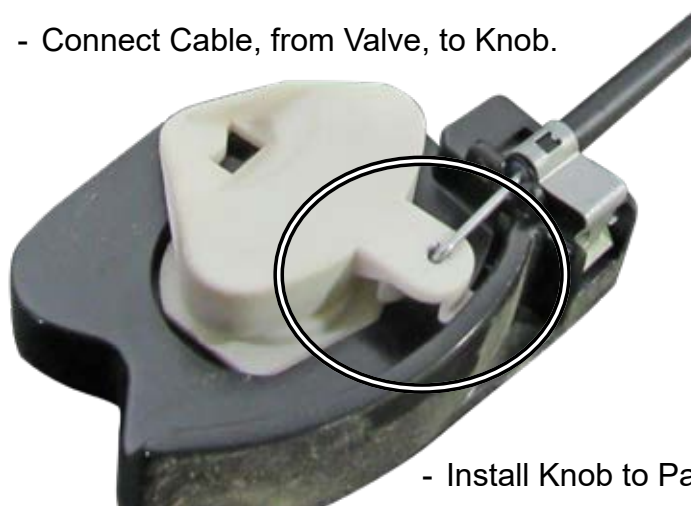


- Install Knob to Panel; tighten.



## **Switch Mounting:**

- User may install Switch in location different than shown.
- Verify that Wire Harness will reach Switch before mounting.
- Connect Switch.

**SuperATV recommends testing Switch before permanently mounting.**

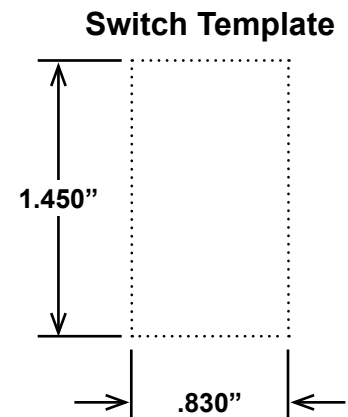

Reinstall previously removed stock components.

- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose before Valve.
- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat "pinch" steps again.