




SSV WORKS, 2610 Calle Quetzal, Camarillo, CA 93012
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

MAVR-DF65U

2023 Can Am Maverick R

Door Pod Kit, 6.5"

Unloaded

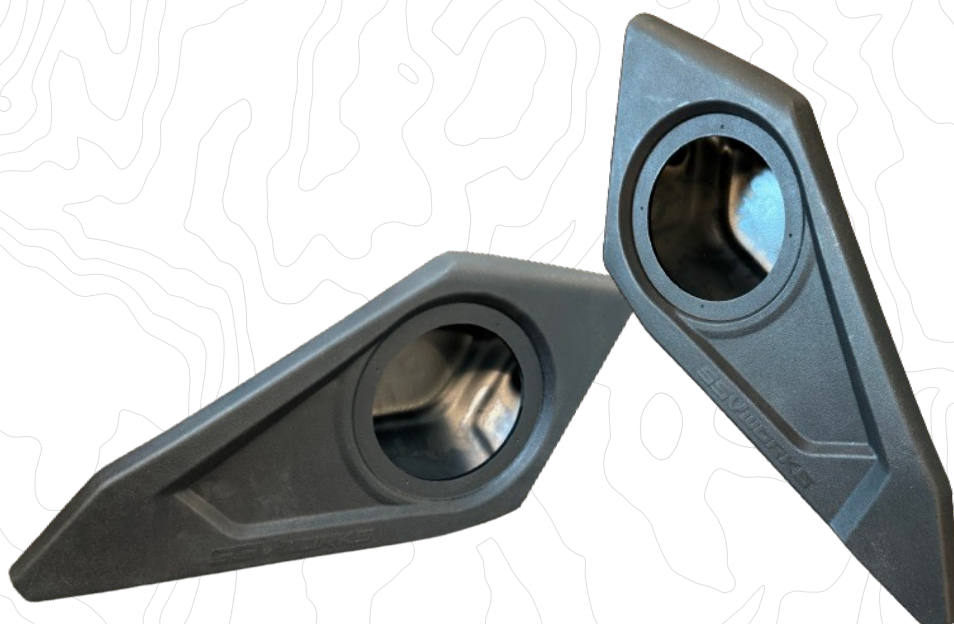

WIRING DIAGRAM

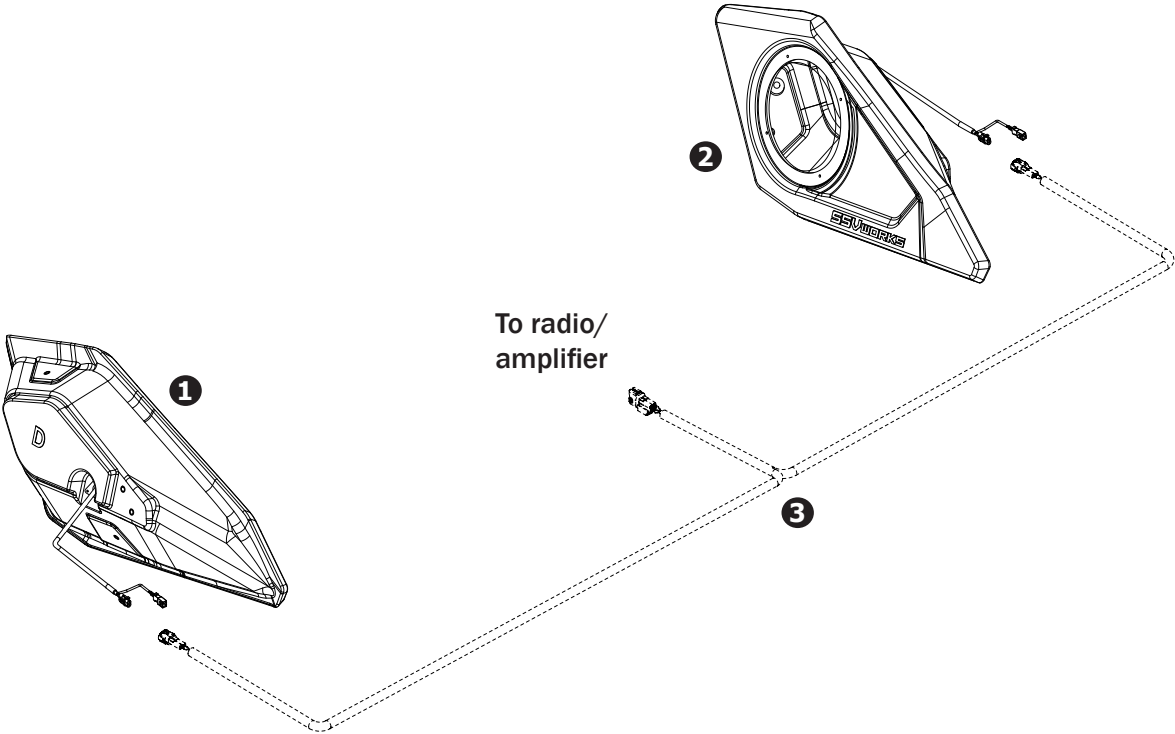



Figure 1

Figure 1 is designed to show the installer a reference overview of the Mav R door pod wiring diagram.

	Description	Part #
❶	Maverick R Door Pod, Driver side (D)	3414
❷	Maverick R Door Pod, Passenger side (P)	3415
❸	Speaker Harness (NOT INCLUDED)	

MAVERICK R DOOR SPEAKER PODS PARTS LIST


PARTS LIST IMAGES

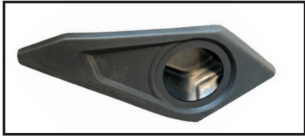

Maverick R Door Pods, 6.5"
(unloaded)




Bracket Pack (B-MBP3418)

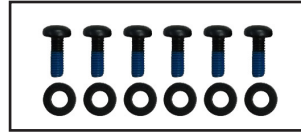

M6x1 x 16, Torx Screws and
Washers, 6 pack [B-HP1317]



#7 x 1.25" Screws, 8 pack
[B-HP1317]

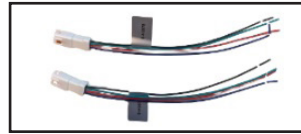

RGB Pigtail [B-H3380]



#14-10 x .75" Screws [B-S2122]

DOOR PANEL DISASSEMBLY

TOOLS NEEDED FOR INSTALLATION


- T20, T30 Torx Driver - 5/16" Drill Bit - Drill




A. Remove the (3) T20 and (5) T30 Torx screws on the door panel. [A1] Note that the fifth T30 Torx screw is hidden behind the weather strip.



B. Carefully pop off the outer door skin starting from the top. [B1] Note that there are (2) clip fasteners on the top and (1) at the bottom.

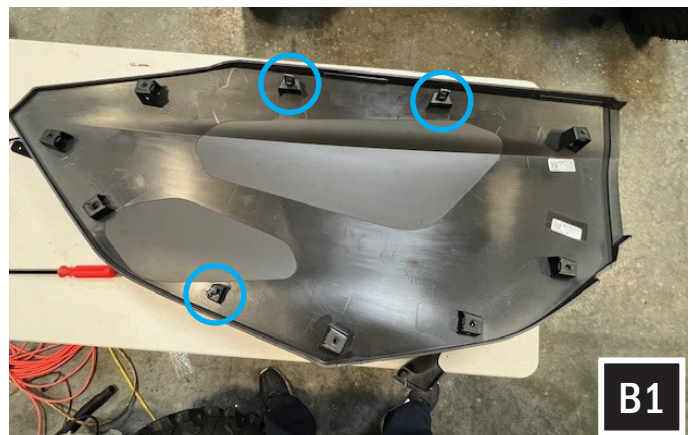

PANELS AND DASH DISASSEMBLY

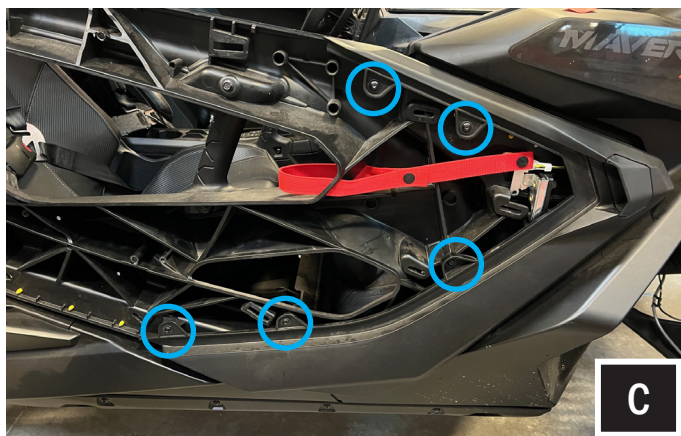

C. Remove the (5) T20 Torx screws holding the door trim.



D. Unhook the door lock linkage rod to remove the trim.



E. Drill out the (3) factory dimples using a 5/16" drill bit.




F. Hold the door pod while aligning the threaded inserts [G].




G. Line up the hole with the threaded insert on the speaker pod.



H. Use the provided screws and washers to secure the speaker pod.
Do not fully tighten the screws yet.

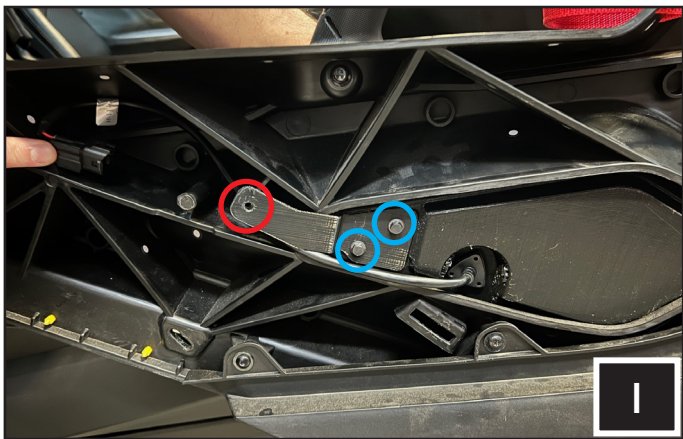

I. Attach the bracket to the speaker pod using the (2) M6x16 screws. Use the #14x.75 screw to attach the bracket to the factory threaded boss. Tuck the cable under the bracket.

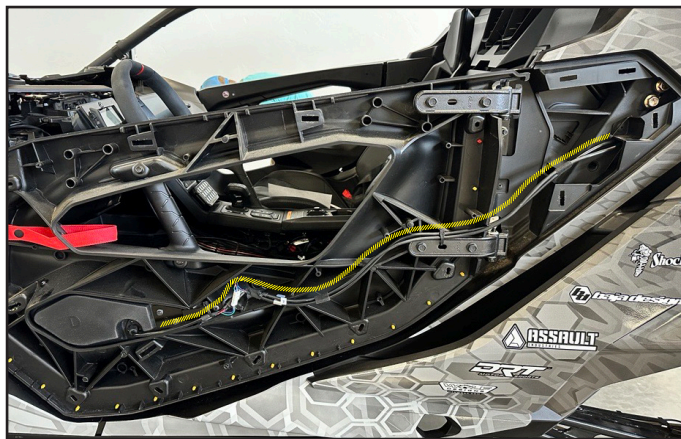

J. Run the speaker cable from the door pod towards the door hinge. Use zip ties to secure the cable. Repeat the process for the other door.



K. Mount the speakers and reverse the process to put back the door panels.

THANK YOU!

We are committed to your satisfaction and we know you will enjoy our products. If you have questions or need any assistance, please let us know.


 SSVWORKS.COM
 1-818-991-1778 EXT 2
 SUPPORT@SSVWORKS.COM

Returns must be made within 30 days of purchase date. Claims for missing items or items damaged in transit must be received within five business days of receipt of merchandise. All returns must be in original packaging and in re-sellable condition. Shipping fees are not refundable.