SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

240-MBS3-SWE12

2019-Up Mercedes Benz Sprinter Van (Gen 3) Alpha12 Switcher Box Mounting Kit

WARRANTY INFORMATION:
ALL SWITCH Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Contact SSV Works for further warranty information.

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.



BY


PARTS CONTENTS



Sprinter Overhead Fascia [B-D3469]



Sprinter Overhead Mounting Bracket [B-D3470]

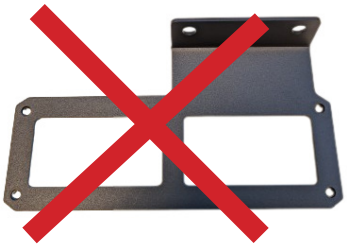

Sprinter ALPHA12 Brain Mount Bracket [B-MB]



M5x10 Pan Head Screw [B-S1158]



4-40x.375 Thread Cutting Screw (x4) [B-S3262]



#7-19 Phillips Screw (x8) [B-S1656]



M8x12 Flanged Hex Bolt & M8 Split Washer (2 ea) [B-S3285 & B-W3176]



4-Pin Controller Extension Cable, 6 ft.

WARRANTY INFORMATION:
All SSV Works Non-Electronic Parts are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- Plastic Card
- Drill
- 6mm Drill Bit
- Small Screw Driver
- Pick Tool

ALPHA12 OVERHEAD MOUNTING KIT ASSEMBLY




A. Insert a credit card in the middle front side of the overhead console to release the lock and slide out the overhead console.



B. Unplug the connectors behind the overhead console.




C. Unhook the (2) rubber limiter bands in the sunglass holder.

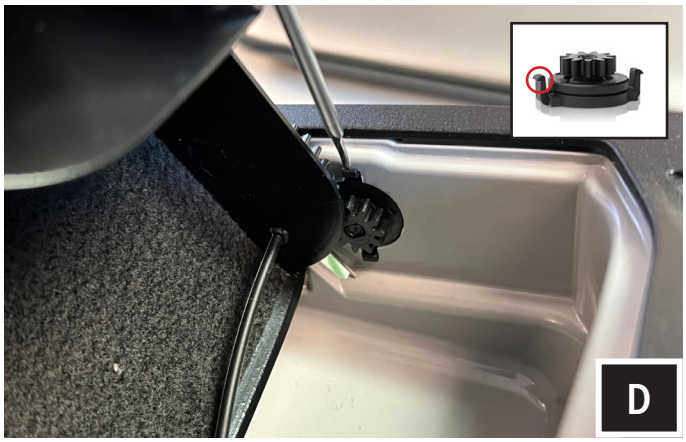

D. Remove the plastic rotary damper by carefully pressing on the lock.




E. Use a small screw driver to carefully pry out the sunglass holder from the overhead console.

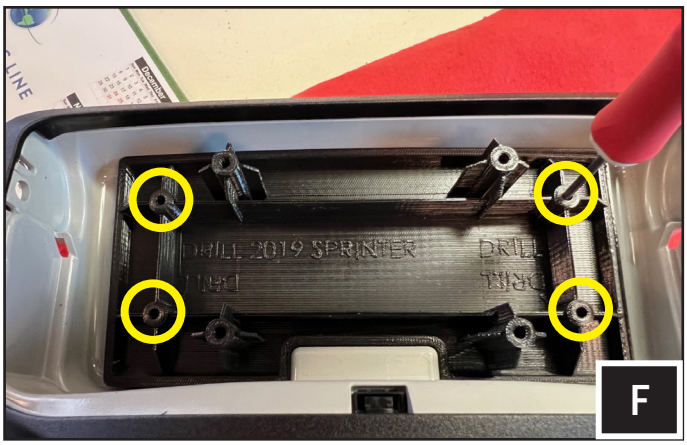


F. Lay the Sprinter mounting bracket in the sunglass holder cavity and mark screw holes using a pick tool.




G. Use a marker to emphasize the screw hole points.

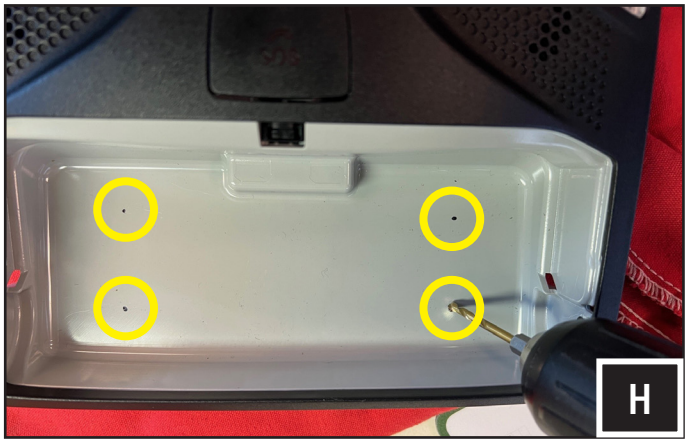


H. Use a 6mm drill bit to drill 4 holes.

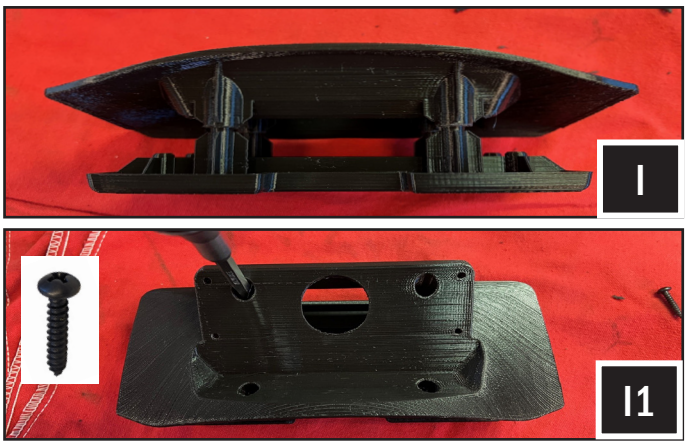


I. Join the Sprinter fascia and mounting bracket using (4) #7-19 screws (B-S1656) to secure them together.

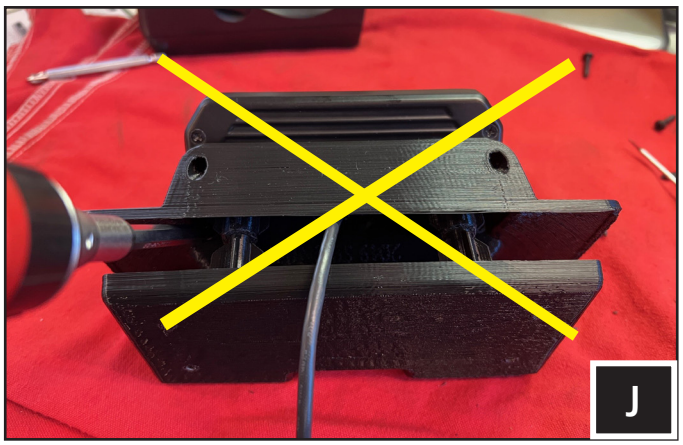

J. Line up the 15-button controller on the Sprinter ALPHA12 overhead mounting kit. Pay attention to the orientation of the controller to the overhead mounting kit.

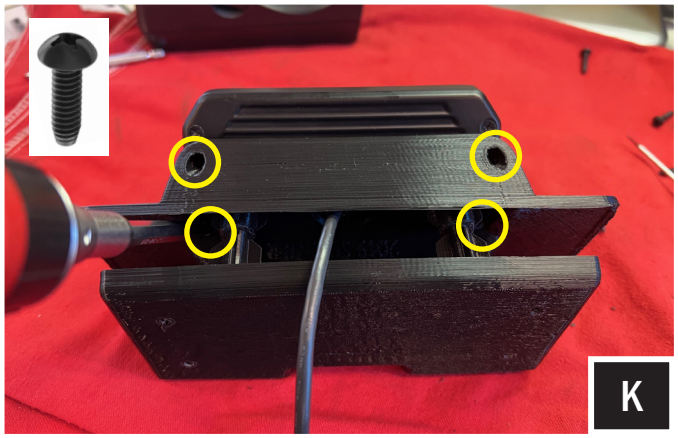

K. Use (4) 4-40x.375 Thread Cutting screws [B-S3262] to secure the 15-button controller to the Sprinter ALPHA12 overhead mounting kit.

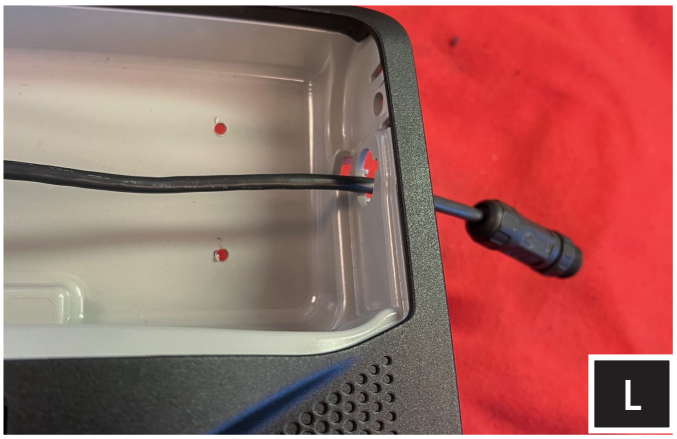

L. Insert the controller cable through the plastic rotary damper hole.



I. Hold the Sprinter mounting bracket in the sunglass holder cavity while fastening the back side with (4) #7-19 screws (B-S1656).




Completed installation of the Sprinter ALPHA12 Overhead Mounting kit.


SWITCH Works Brain Module Installation

TOOLS NEEDED FOR INSTALLATION


- Phillips Screw Driver
- 13mm wrench

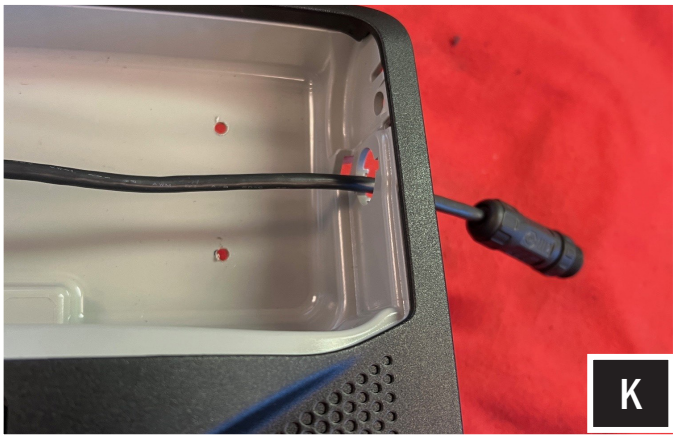

K. Insert the controller cable through the plastic rotary damper hole.

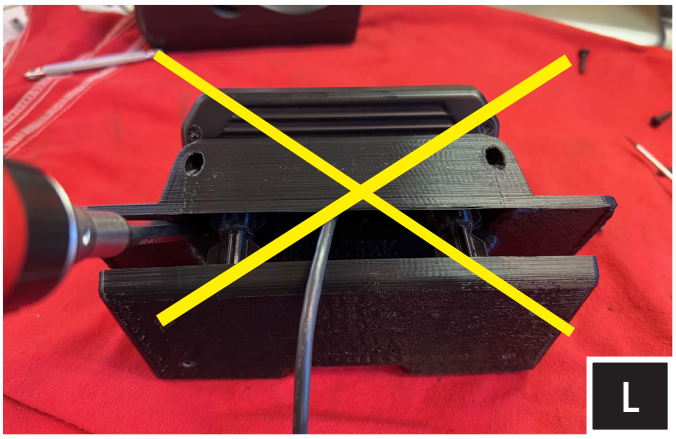

L. Line up the 15-button controller on the Sprinter ALPHA12 overhead mounting kit. Pay attention to the a

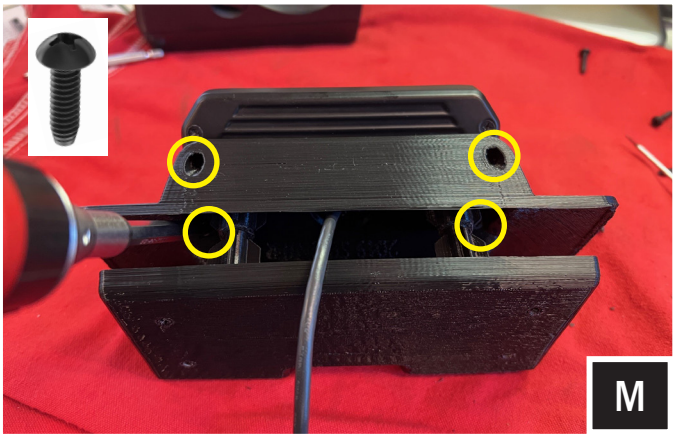

M. Use (4) 4-40x.375 Thread Cutting screws [B-S3262] to secure the 15-button controller to the Sprinter ALPHA12 overhead mounting kit.



Completed installation of the Sprinter ALPHA12 Overhead Mounting kit.

THIS CONCLUDES THE INSTALLATION PROCESS. QUESTIONS?
PLEASE CONTACT SSV WORKS AT 818-991-1778 OR EMAIL SUPPORT@SSVWORKS.COM



© 2023 SSV Works, Oxnard, CA 93030 MBS3-SWE12 Rev.A 1-11-24