


INSTALLATION INSTRUCTIONS

FBG-K-H2: Front Bumper Kit 2026 Kawasaki H2

- Please look through and read these instructions BEFORE starting so you understand what processes you'll be doing, and possible extra tools you may need.
- Do Not discard product packaging until installation is complete and functioning properly.

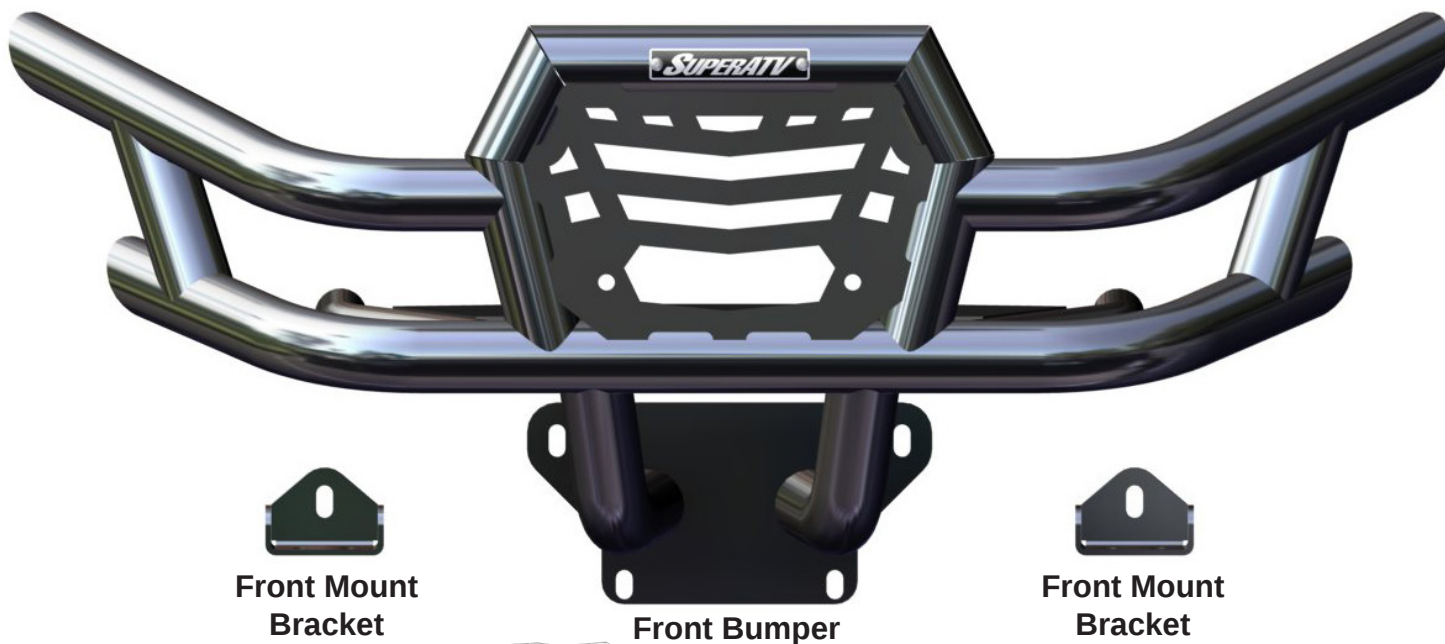

1. The first thing you need to do is **Remove the Push-Pins** from the Front Cover and **Remove the Cover** as shown in Fig.1a-c.

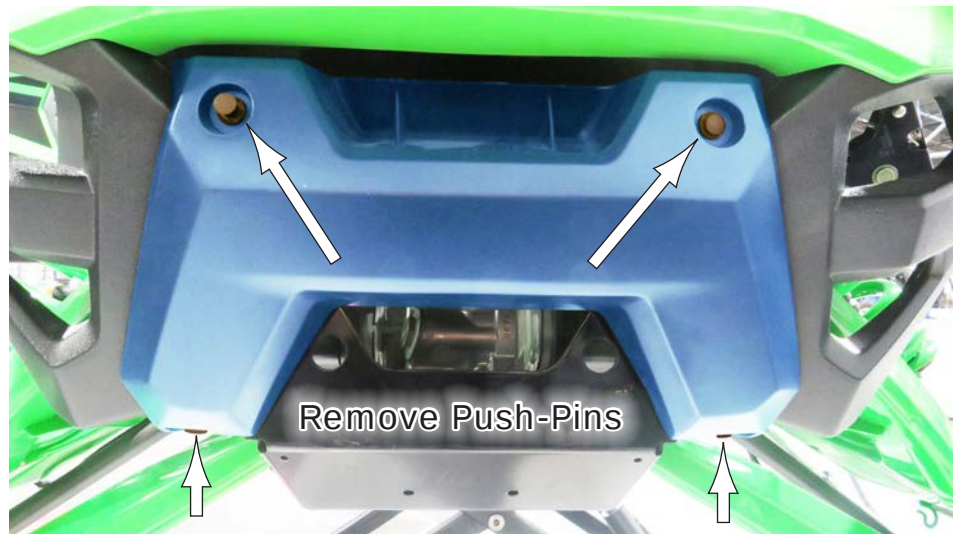


Fig.1a



Fig.1b



Fig.1c

2. Next, find the **Front Mount Brackets** and the **M8x16 Hex Flanged Bolts** provided in your kit as shown in Fig.2a. Fig.2b shows you the basic location you will install these onto on each side of the vehicle.

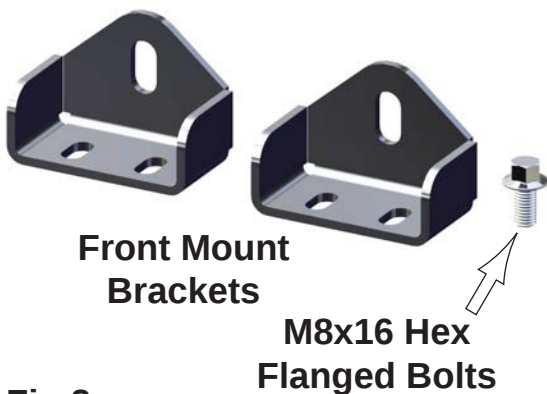


Fig.2a

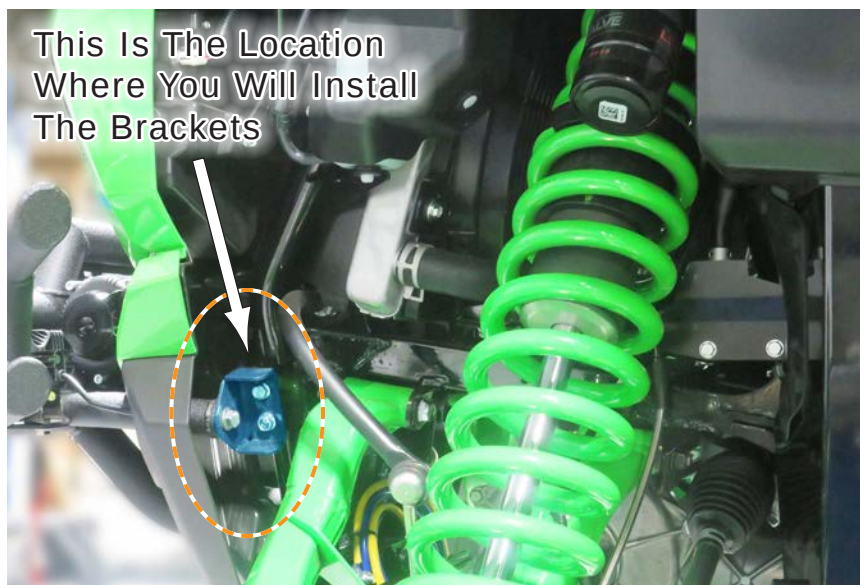


Fig.2b

3. **Fig.3a** shows the frame bracket where you will be installing the **Mount Bracket** onto. Then **Install** it using the **M8x16 Hex Flanged Bolts** provided in your kit and tighten secure. See **Fig.3b**.



Fig.3a

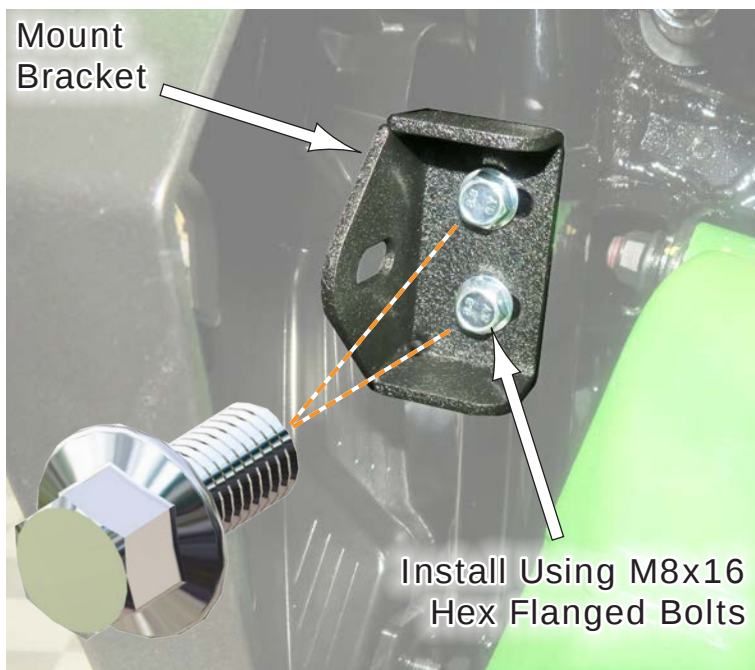


Fig.3b

4. Once you have the Brackets installed, you can now Mount the Bumper in place. **Fig.4** shows the easy placement of the bumper and the bolt locations to give you a perspective of your installation.

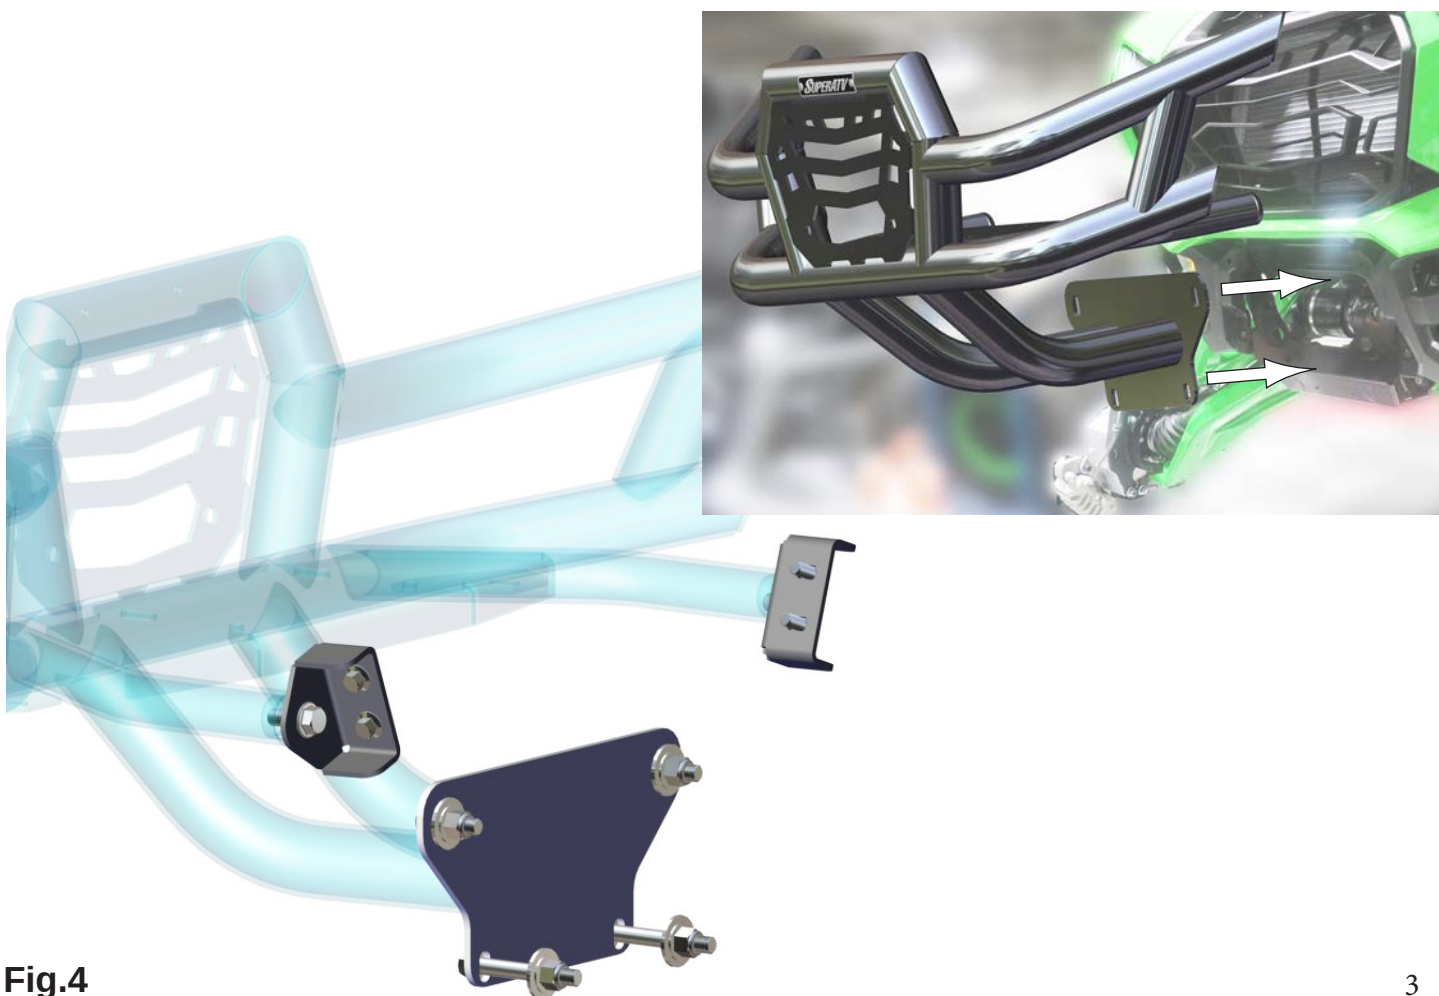


Fig.4

5.First **Install** the **M10x70 Hex Flanged Bolts** with the **M10 Washers** & **M10 Flanged Nylock Nuts** provided in your kit, as shown in **Fig.5a-c**. Lightly snug but do not tighten down yet.



Fig.5a

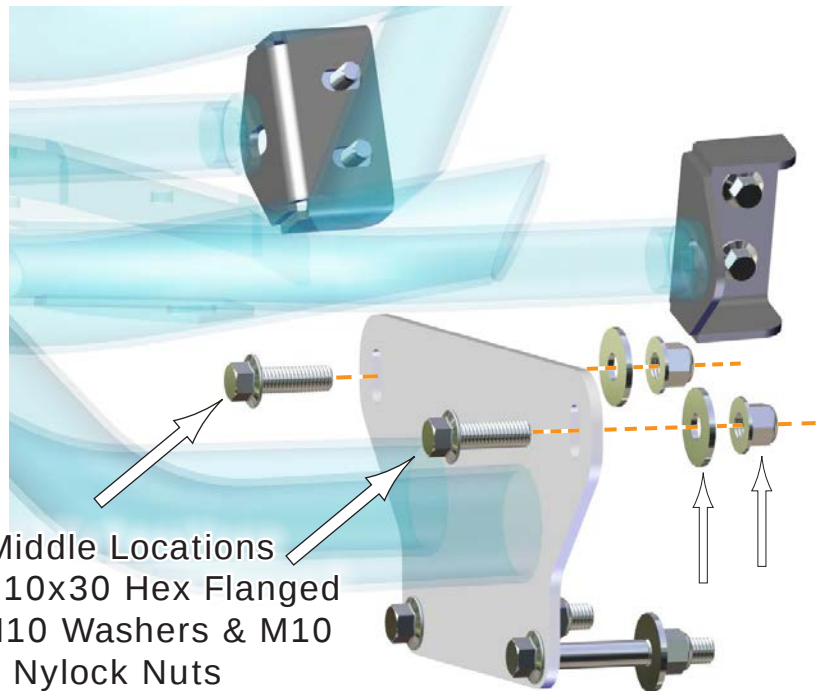


Fig.5b



Fig.5c

6.After the lower two (2) bolts are in place, now **Install** the Two (2) Middle bolt locations using the **M10x30 Hex Flanged Bolts**, **M10 Washers** & **M10 Flanged Nylock Nuts** also provided in your kit. Again, snug but do not tighten down yet. See **Fig.6a-c**.



Install Middle Locations
Using M10x30 Hex Flanged
Bolts, M10 Washers & M10
Flanged Nylock Nuts

Fig.6a

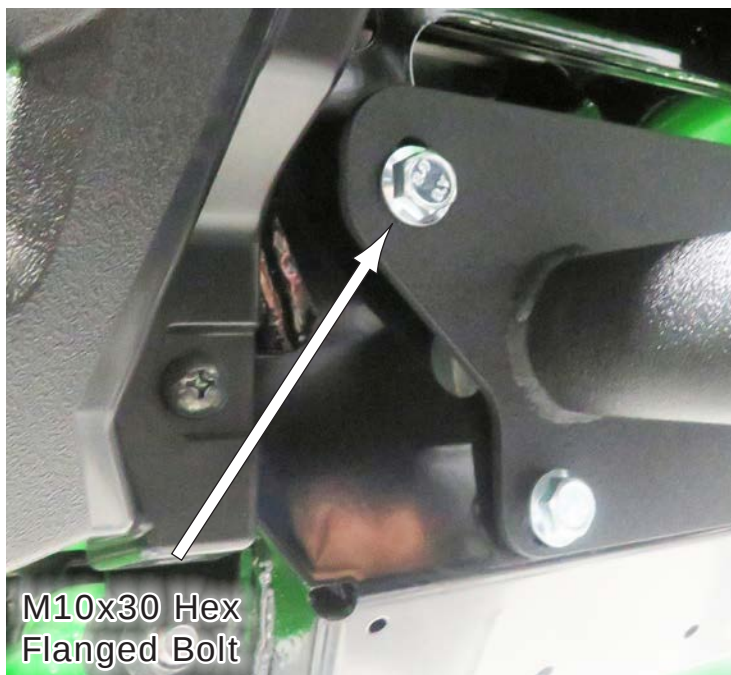


Fig.6b

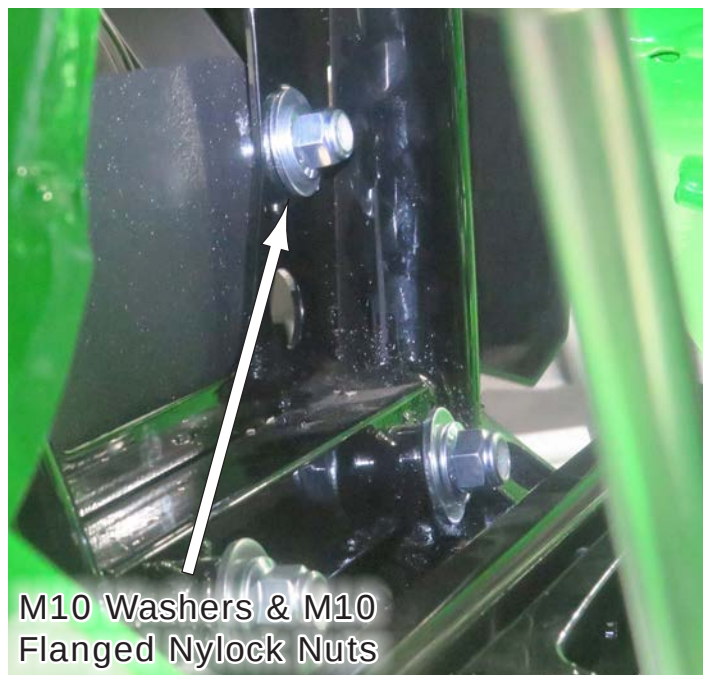


Fig.6c

7. Now **Install** the **Upper Tube Bolt Hole Locations** using the **M10x25 Hex Flanged Bolts** provided in your kit, one on each side as shown in **Fig.7a-b**. Do not tighten down yet. See **Fig.7a-b**.



Fig.7a



Fig.7b



Lastly, looking from the front, adjust the level and desired position of the bumper. When you are satisfied, then go back and tighten down all screws and bolts that you installed during this installation. Then reinstall all other body panels and items previously removed from the vehicle.



Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

If you have any problems/questions on this kit, contact us by email at [Superatv.com](mailto:sales@superatv.com).

*Thank You
For Choosing*

Need help with your installation?

	sales@superatv.com		www.superatv.com
	1-855-743-3427		8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday 9:00am - 2:00pm EST Saturday



Like SuperATV on Facebook to keep up to date on new products!