


2026+ Kawasaki Teryx H2 Volt Rock Steps

RKS420001



INSTALLATION GUIDE

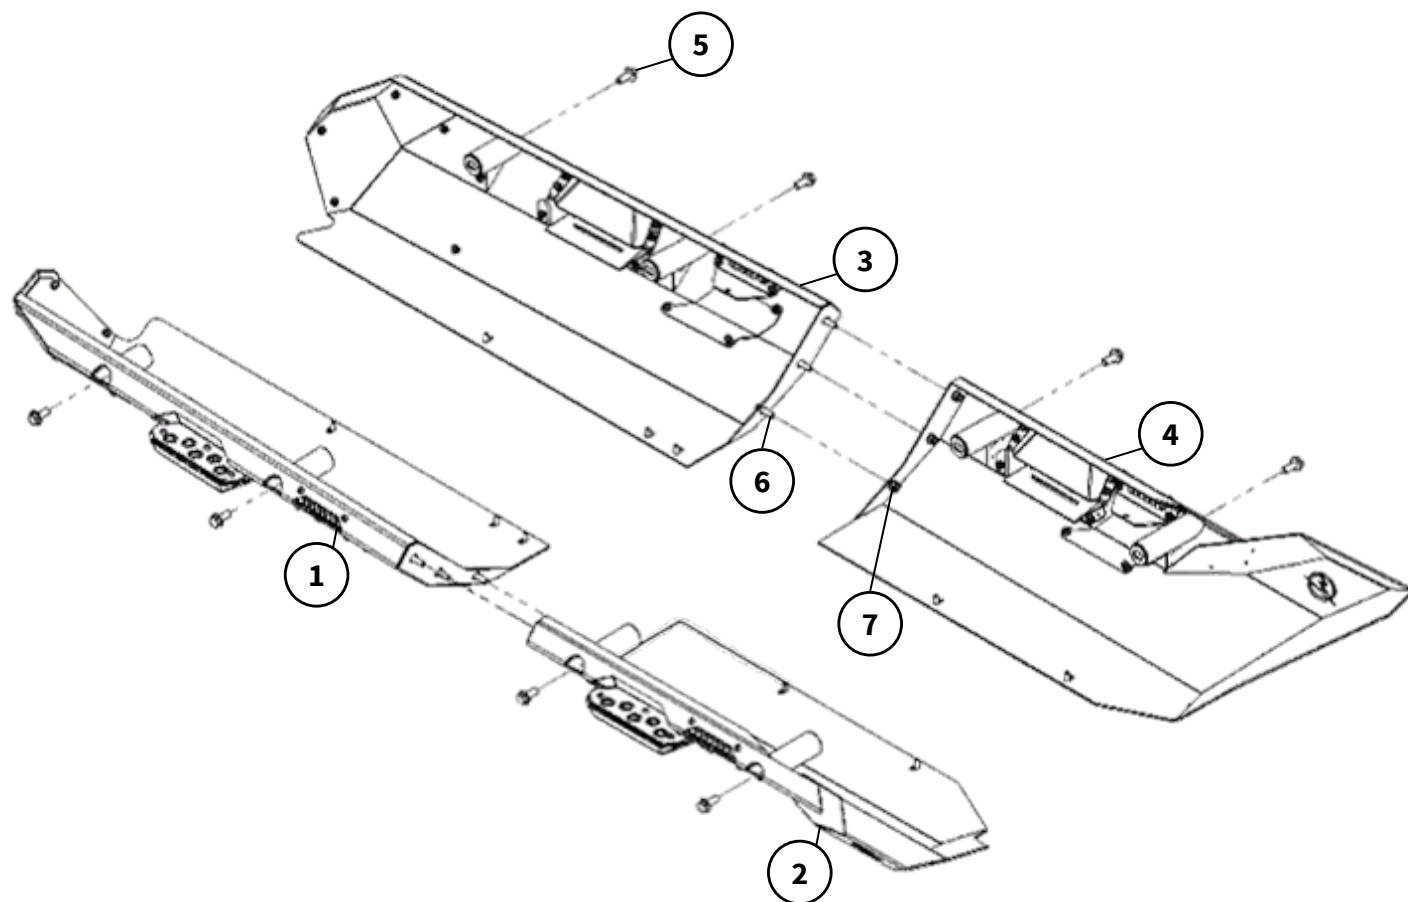

ITEM #	DESCRIPTION	QTY
1	DRIVER FRONT SIDE STEP	1
2	DRIVER REAR SIDE STEP	1
3	PASSENGER FRONT SIDE STEP	1
4	PASSENGER REAR SIDE STEP	1
5	M10 x 1.25mm x 25mm FHHCS	4
6	M8 x 1.25mm x 25mm FHHCS	6
7	M8 x 1.25mm NYLOCK NUT	6
8	M8 PLAIN WASHER	6

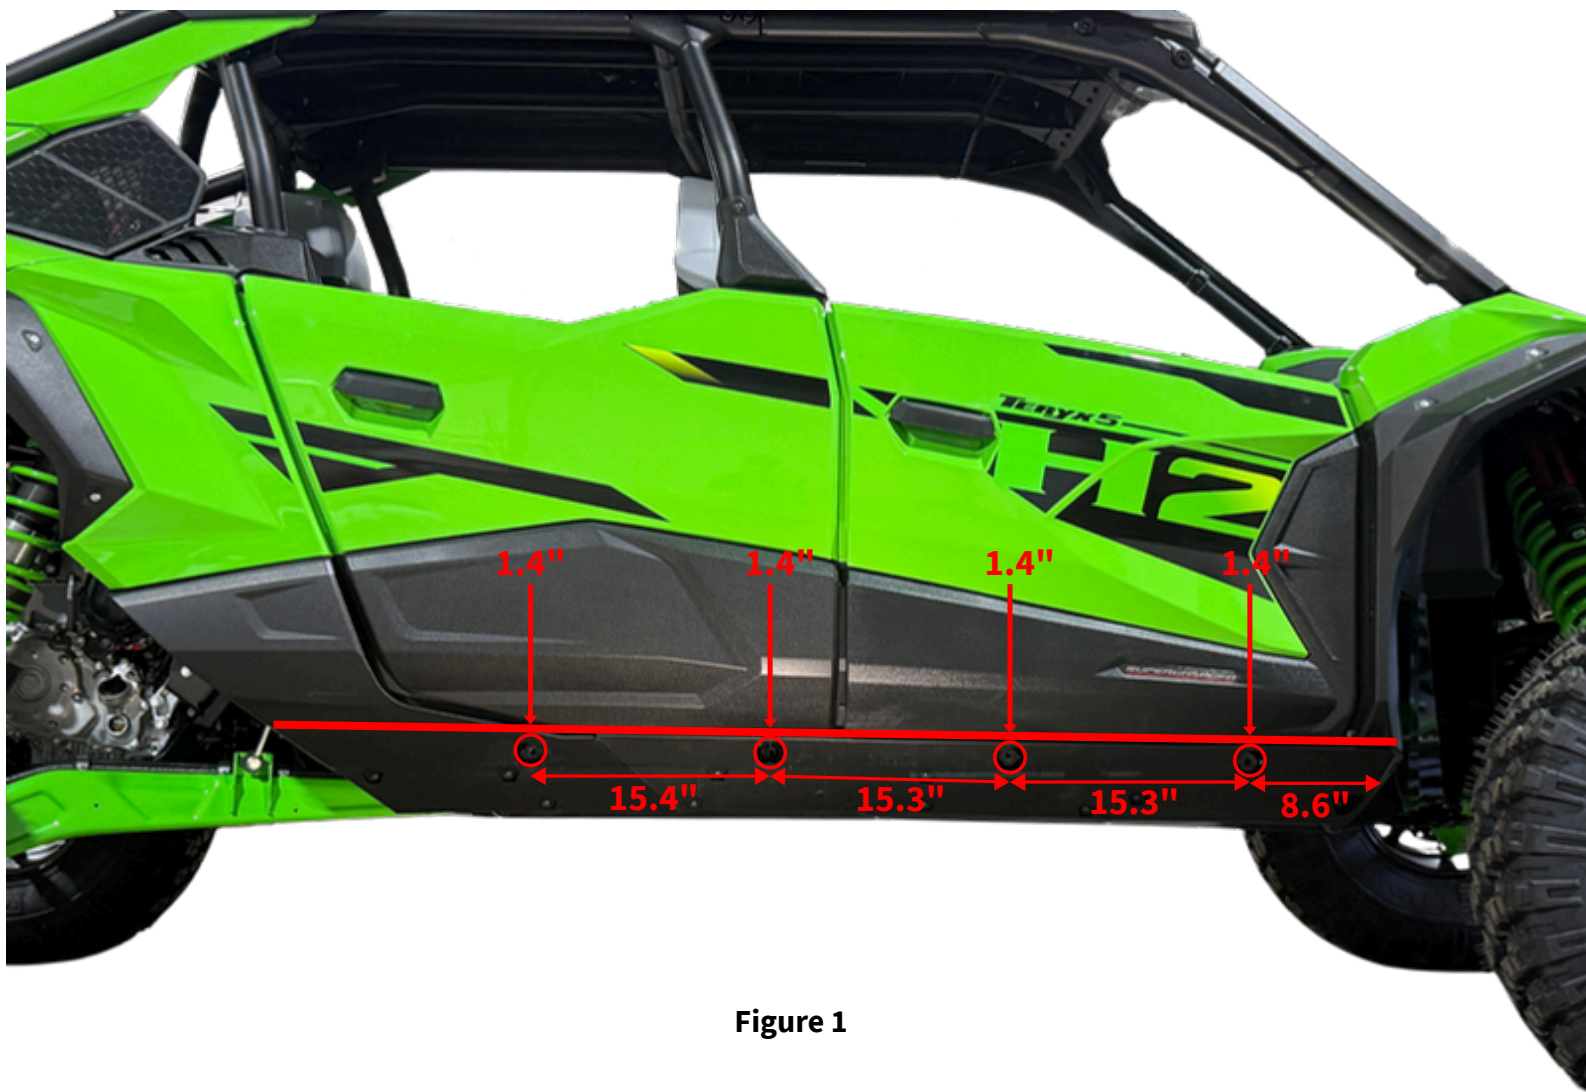


Figure 1

Using figure 1, measure the side panels accordingly to locate the factory dimples stamped on the side panels.

Use a 1.75" OD Size Hole Saw, cut on the marked locations, keep the cuts horizontally as possible.

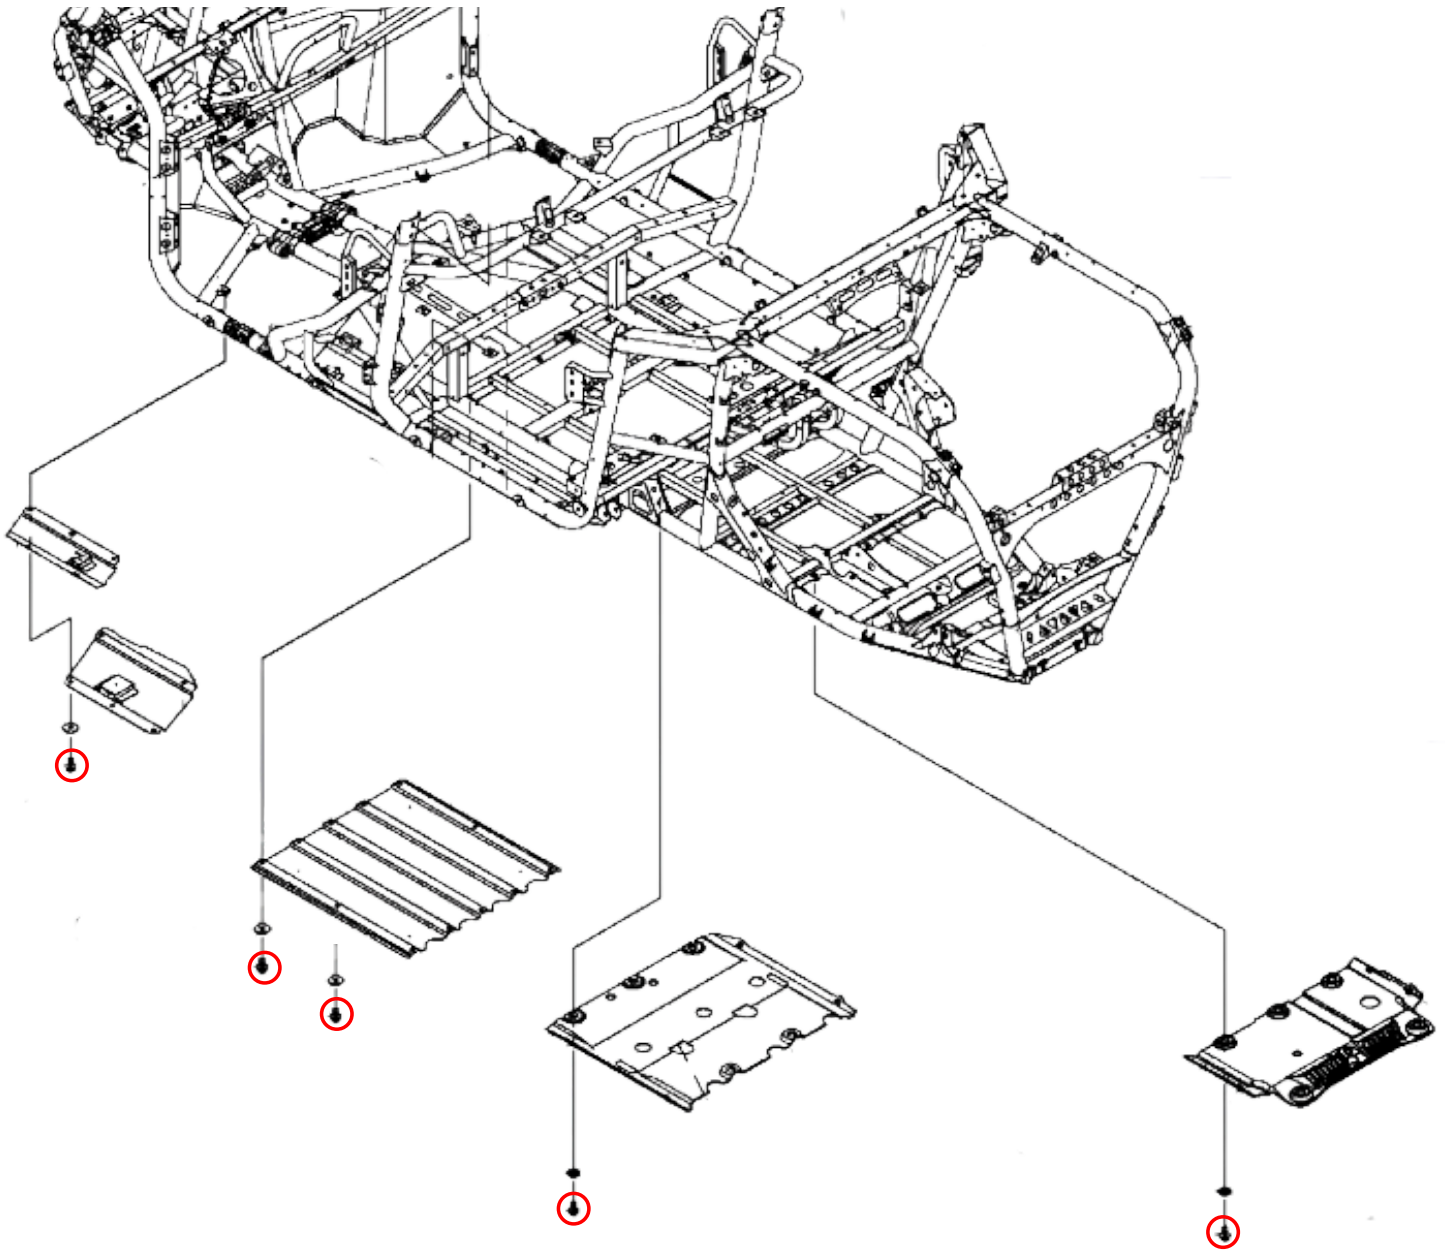


Figure 2

Remove and save the hardware located underneath for each side for the bottom panels.

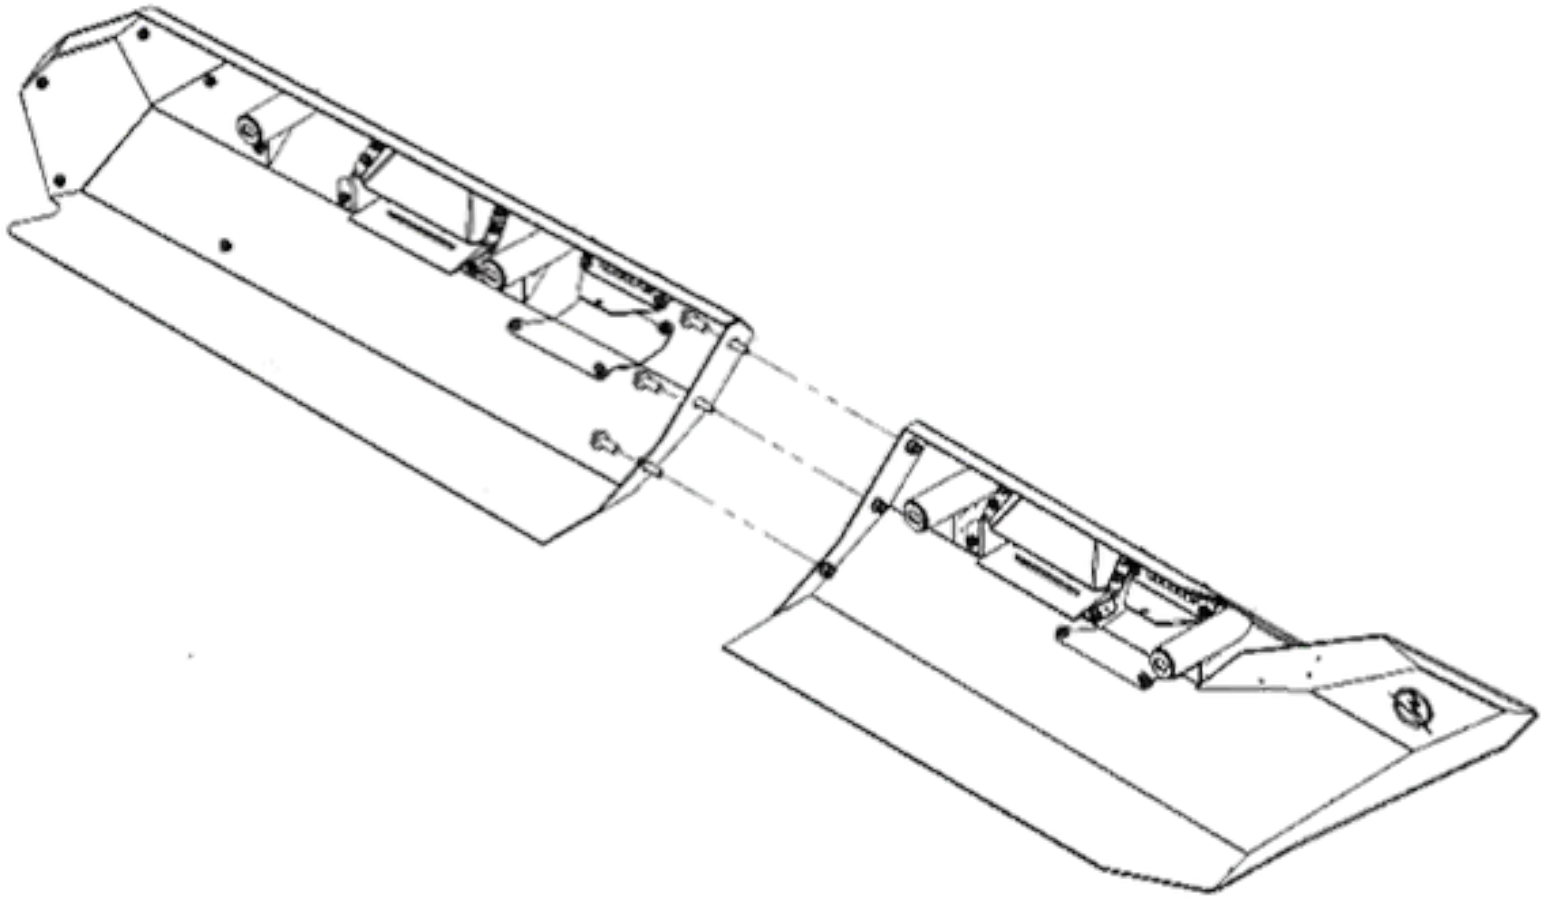


Figure 3

Connect the front and rear side steps using the supplied hardware (6, 7, 8).

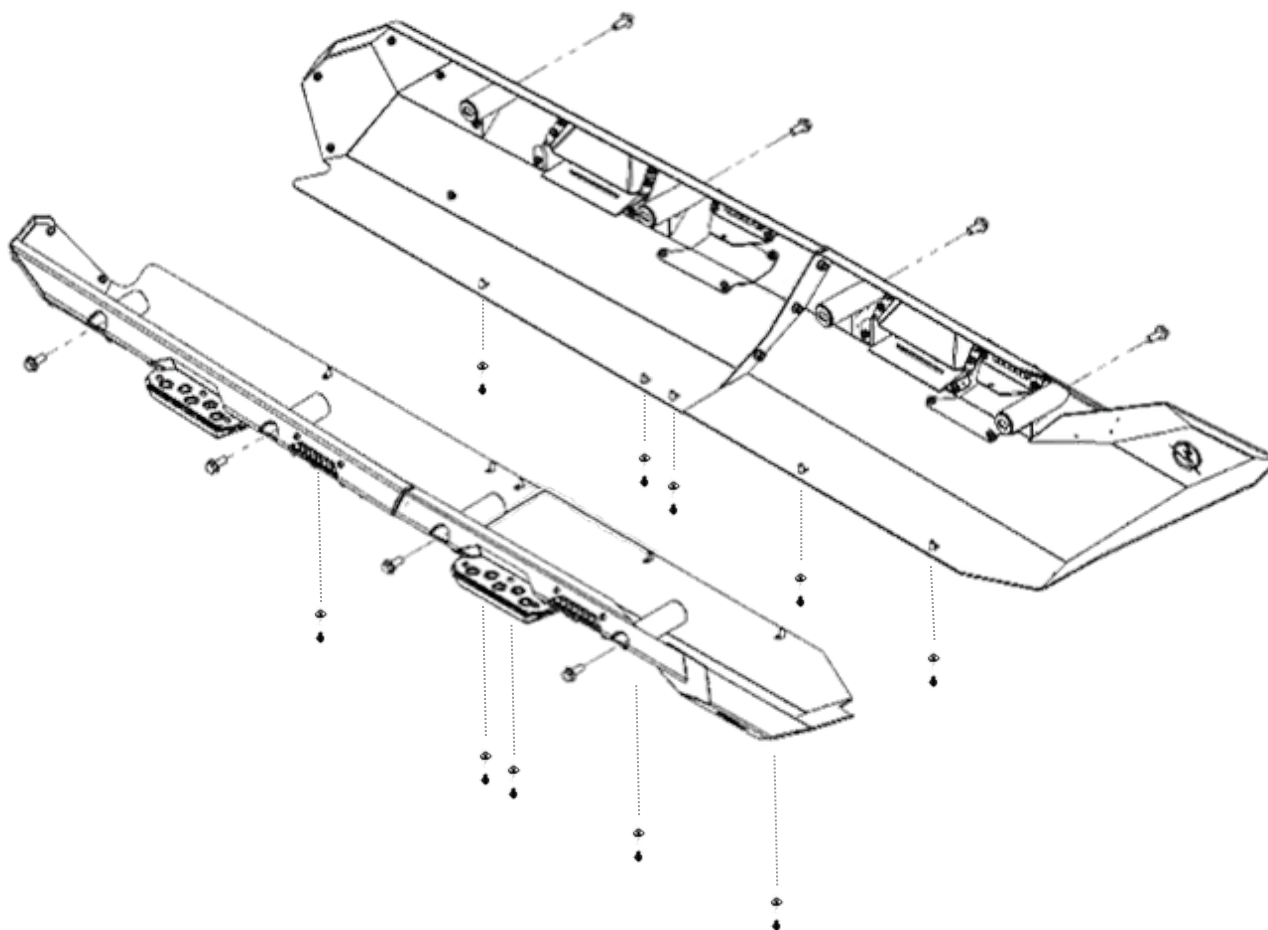


Figure 4

Install the side steps using the supplied hardware (5).

Install the hardware removed from the bottom panels.



**Perform a final inspection, adjust and torque as needed.
Enjoy another product from Elektric Offroad Designs!**