



2026+ Kawasaki Teryx H2 Volt Rear **Bumper** **RRB420001**



INSTALLATION GUIDE

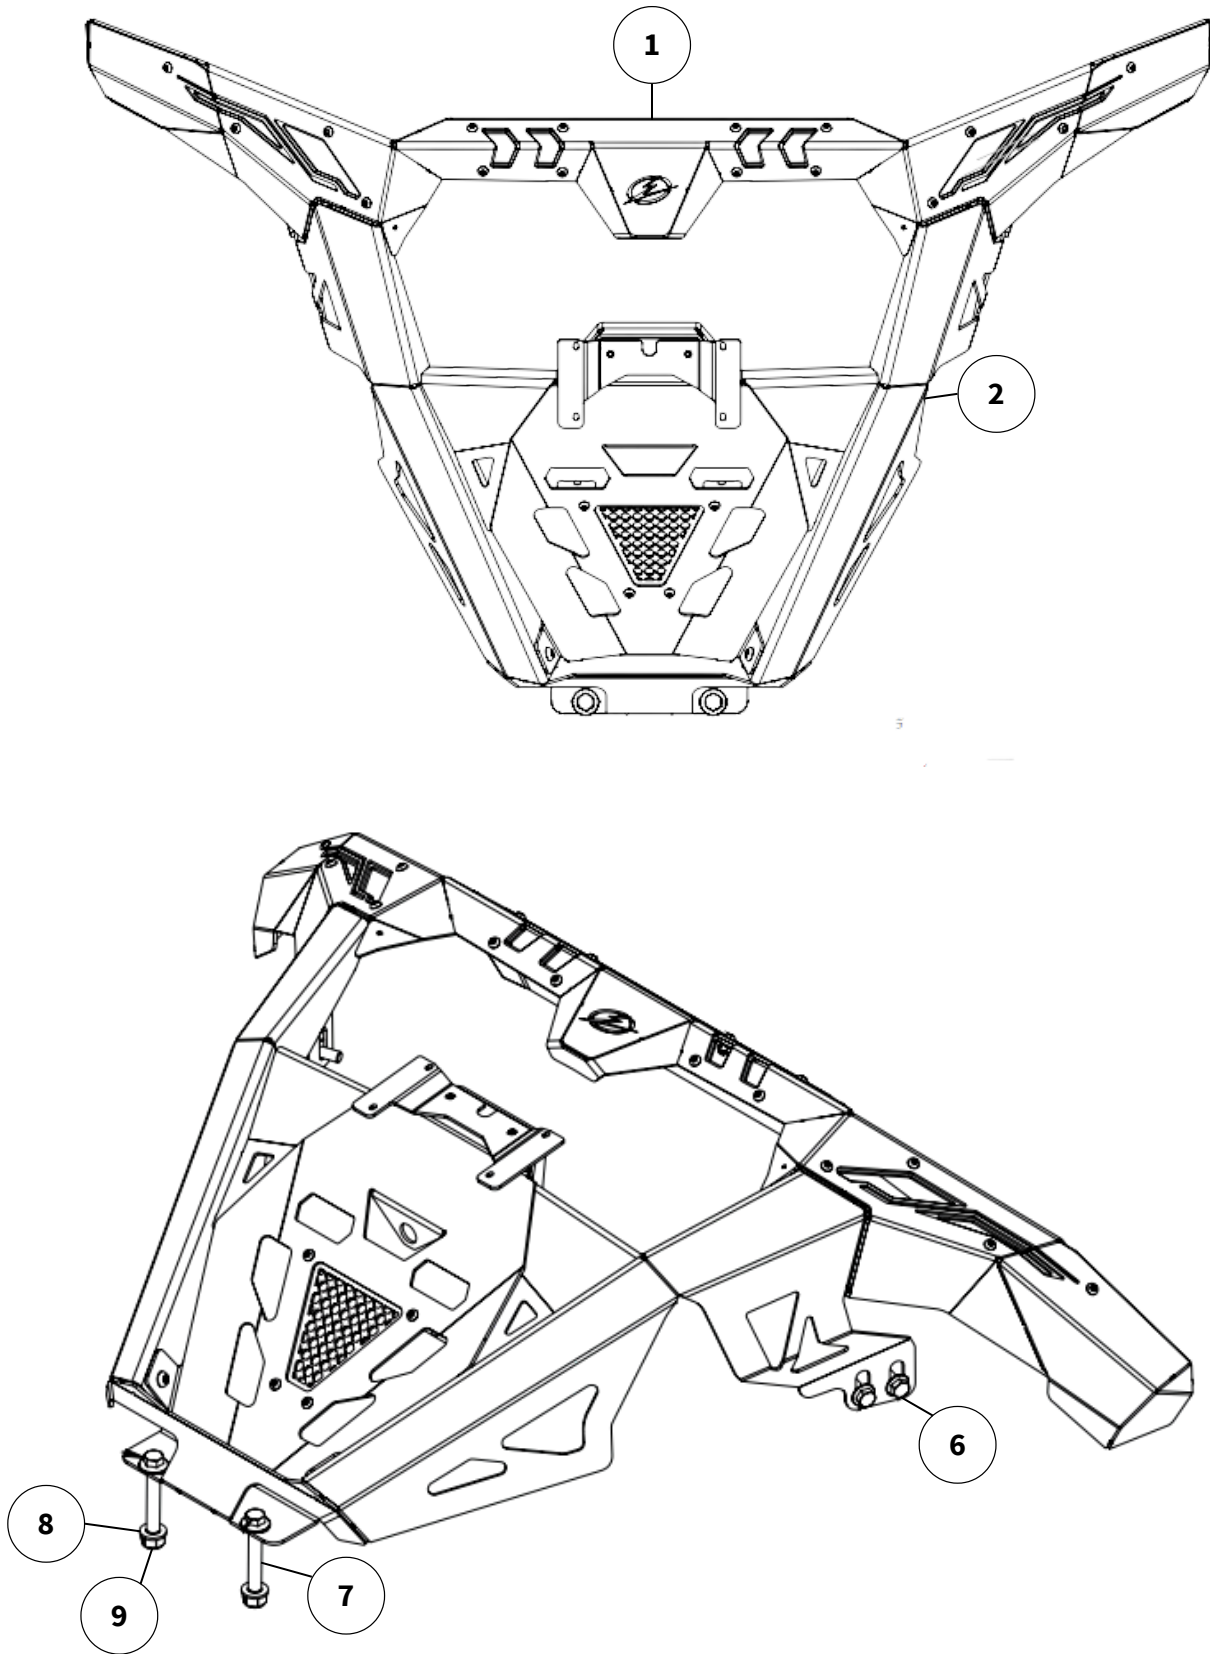

INSTALLATION GUIDE

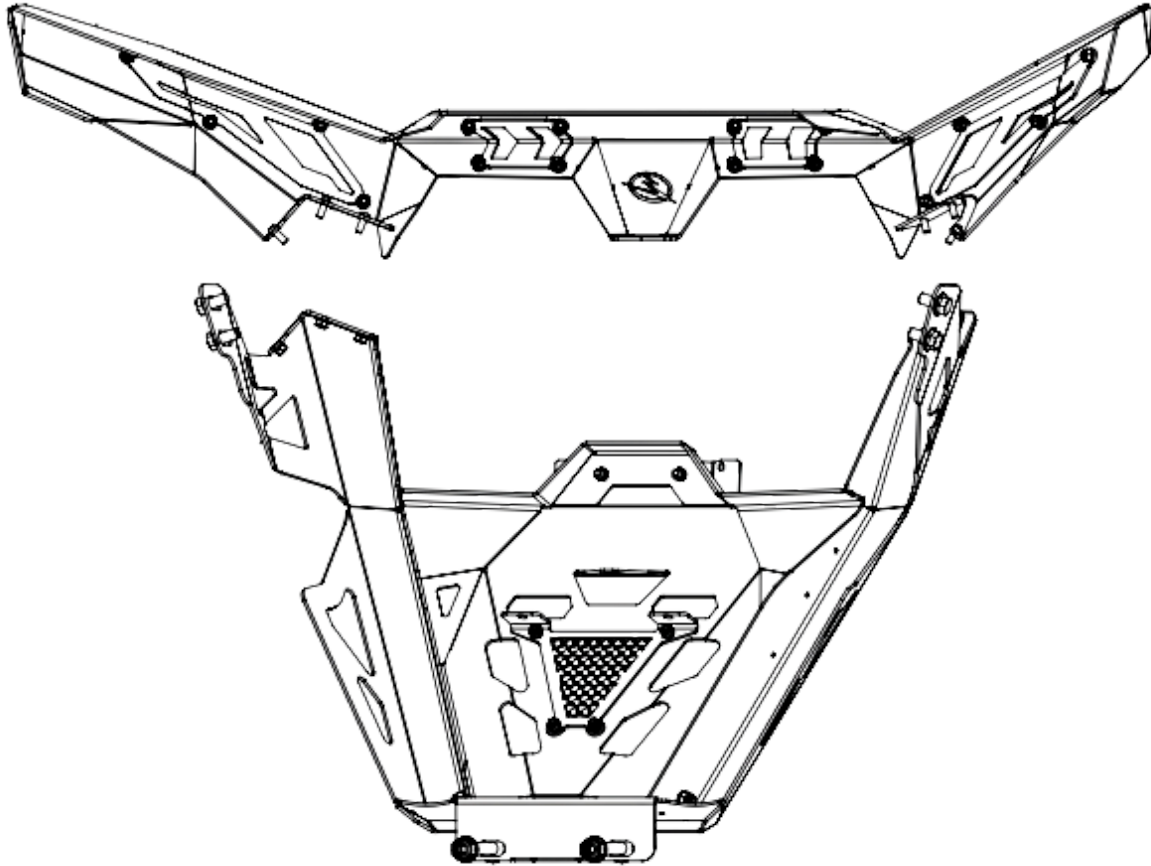

ITEM #	DESCRIPTION	QTY
1	REAR BUMPER TOP STRUCTURE	1
2	REAR BUMPER LOWER STRUCTURE	1
3	M6 x 1.0mm x 16mm SBHCS	6
4	M6 PLAIN WASHER	6
5	M6 x 1.0mm NYLOCK NUT	6
6	M10 x 1.25mm x 20mm FHHCS	4
7	M12 x 1.75mm x 70mm FHHCS	2
8	M12 PLAIN WASHER	2
9	M12 x 1.75mm NYLOCK NUT	2

Hardware List

M6 x 1.0mm x 16mm SBHCS x6

M6 PLAIN WASHER x6

M6 x 1.0mm NYLOCK NUT x6

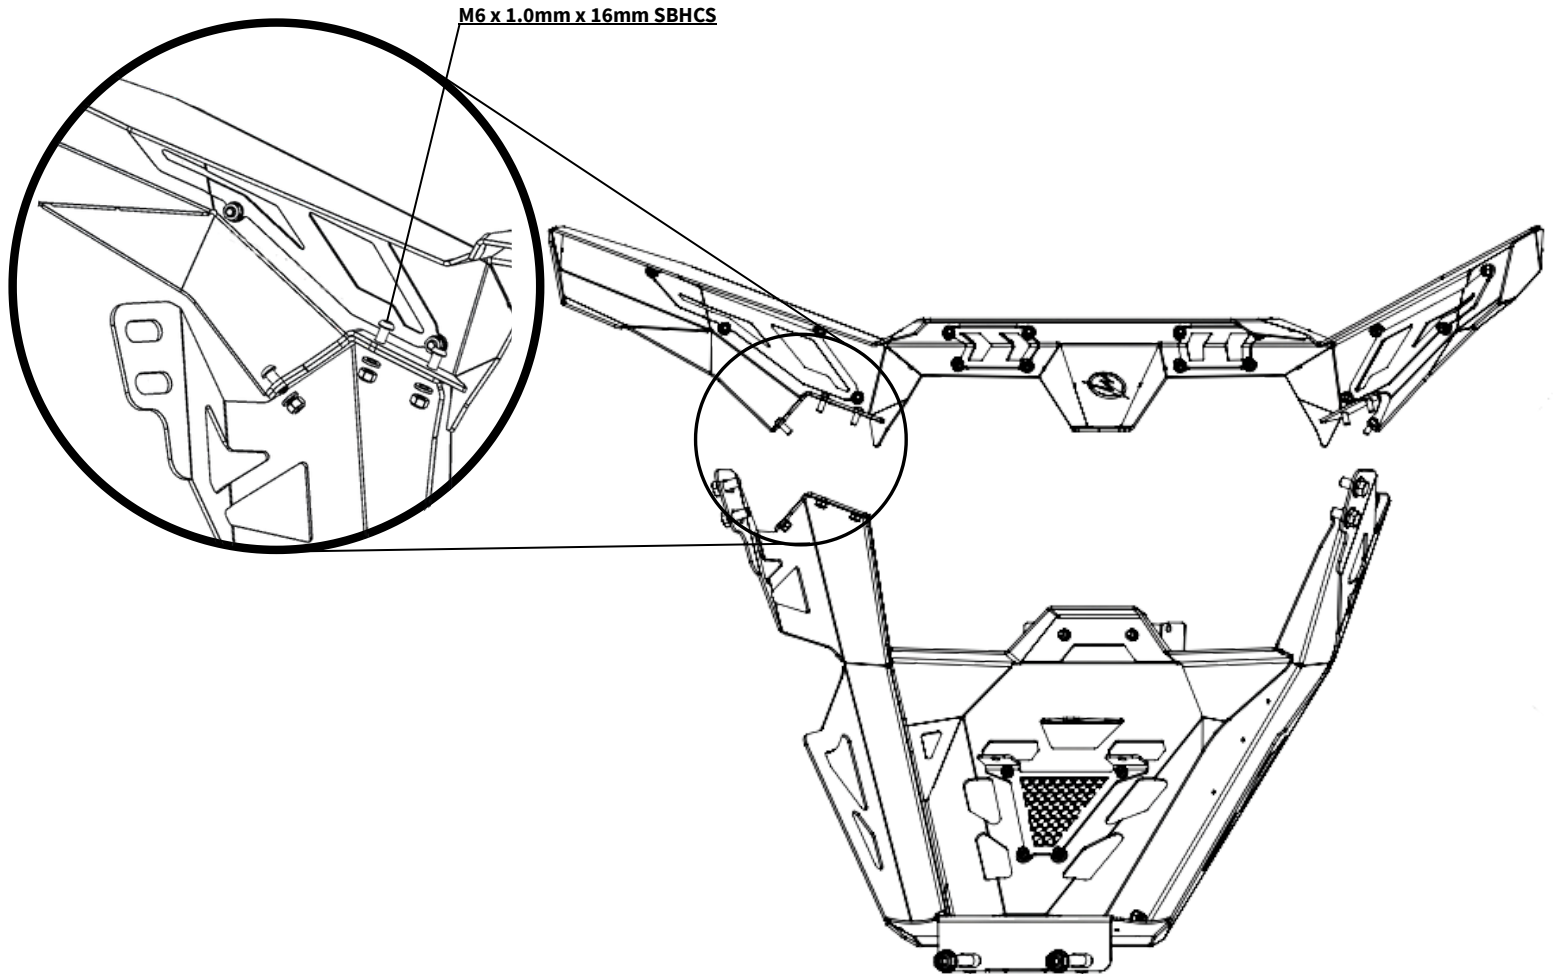


Figure 1

Connect the top and lower rear bumper structure (1, 2) using the supplied hardware (3, 4, 5).

Hardware List

M10 x 1.25mm x 20mm FHHCS x4
M12 x 1.75 x 70mm FHHCS x2
M12 PLAIN WASHER x2
M12 x 1.75mm NYLOCK NUT x2

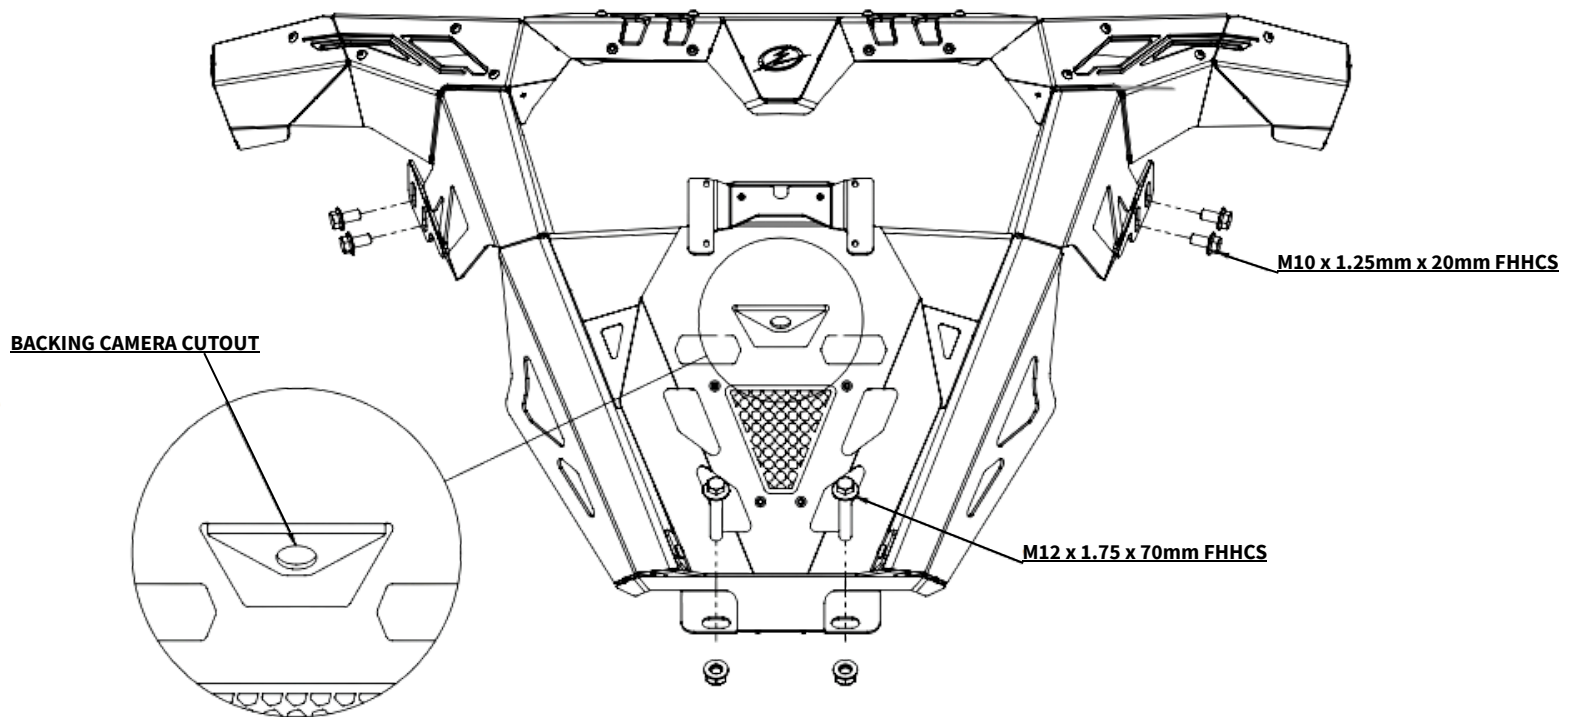


Figure 2

Loosely install the rear bumper using the supplied hardware (6, 7, 8, 9) and once connected to the vehicle, confirm the alignment and check for gaps.

Tighten the hardware for the bumper.

Relocate the rear camera to the bumper.



**Perform a final inspection, adjust as needed.
Enjoy another product from Elektric Offroad Designs!**