


WTA



Installation Guide

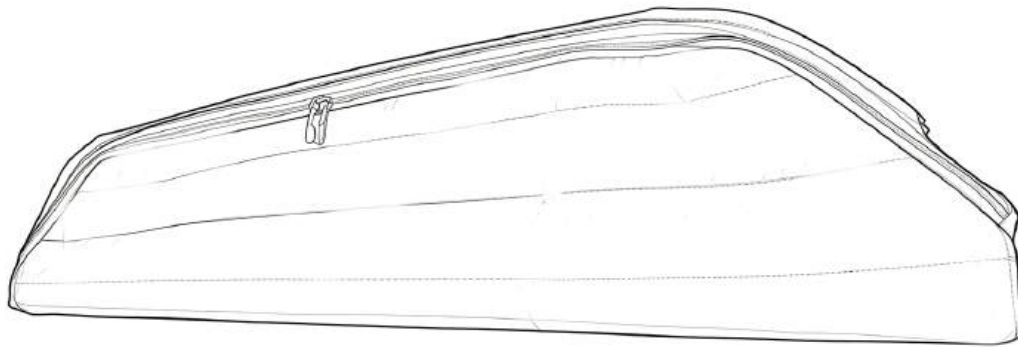


SPRINTER HEADLINER SHELF COVER V1.0


It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.

To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any after market accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individual who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.

PACKAGE CONTENTS

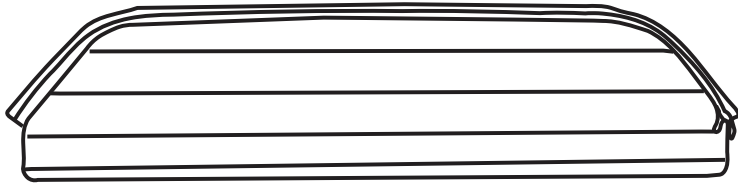

Headliner Shelf Cover
QTY:1

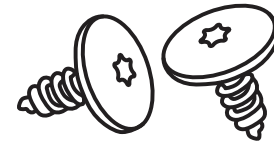

Self Tapping Screw
4mm - 16mm

INSTALL

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Clean the bottom edge of your headliner shelf.

1.2 Stick one Velcro strip on the the roof of the van ,and the other strip on the bottom of the headliner shelf. Make sure to center the Velcro on the the ceiling and shelf.


1.3 Place your headliner shelf cover centered in the space above your headliner shelf.



STEP 02 Finishing Installation

2.1 Press the cover to the strip to adhere. Start from the center of the upper portion of the cover and work your way down the sides making sure the adhesive is properly secured to the ceiling then do the same on the bottom portion.

2.2 As an optional option (Recommended), if you want to install the cover more securely, unzip the shelf cover and gently drill the included screws through the top of the shelf cover and in to the headliner for extra security. Start in the center and work your way to the top corners (place two screws closer together close to the center of the corner to keep the corners from having gaps) evenly space two more screws down the side as you move towards the self.

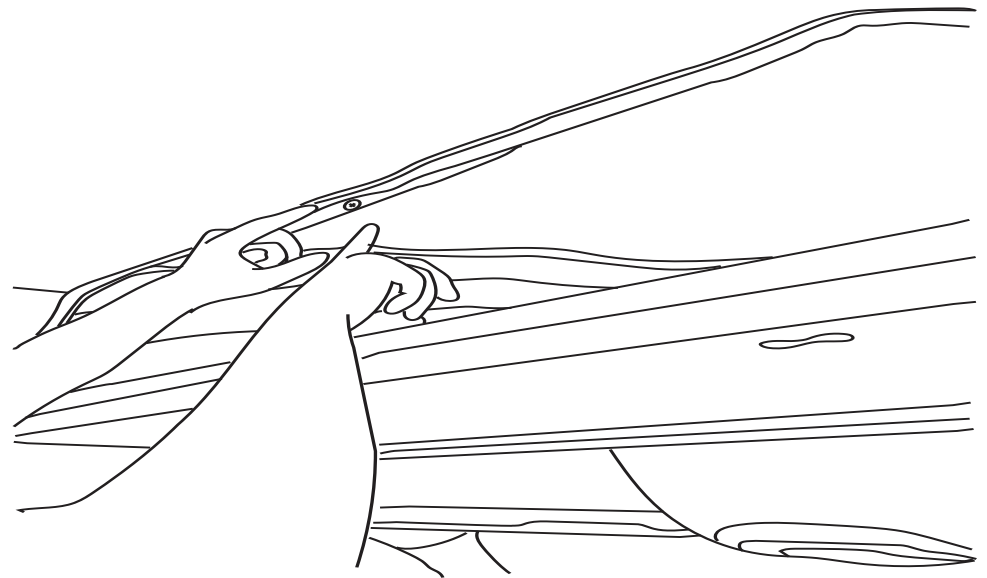

GET THERE WITH WHITE TOP ADVENTURES



info@whitetopadventures.com



thanks!