

TUSK QUIET GLIDE ADVENTURE SKID PLATE PART NUMBER: 1975340021



Thanks for your purchase of the Tusk Adventure Skid Plate. Please take note of the information and instructions below to get the most out of your Tusk product.

Assembly: *Before you throw any packaging away, make sure you received all of the necessary hardware.*

Vehicle Fitment:	
2025+ KTM 390	
Hardware:	QTY:
Skid Plate	1
Front Bracket	1
Rear Bracket	1
M6x16mm Flange Torx Bolt	4
M8x16mm Hex Flange Bolt	2
Aluminum Spacer	2

NOTE: Blue thread-locker is recommended on all hardware.






Installation Instructions:

- 1. Begin by removing the OEM skid plate.
- 2. Remove the front engine mount’s M10x130mm bolt. Remove the spacer from inbetween each side of the motor and the engine cradle. **FIG 1**
- 3. Insert the **Front Bracket** into the space where the spacer was just removed from as shown in **FIG 1**.

If installing the Tusk Skid Plate without crash bars place **Aluminum Spacer** on each side between the engine cradle and the Front Bracket. Reinstall the M10x130mm bolt. Leave bolt loose for now. **FIG 2**

If installing the Tusk Skid Plate with Tusk Crash Bars no spacers are necessary. The Tusk Crash Bars mount tab will fit on the outsides of the Front Bracket. Reinstall the M10x130mm bolt. Leave bolt loose for now. **FIG 3**

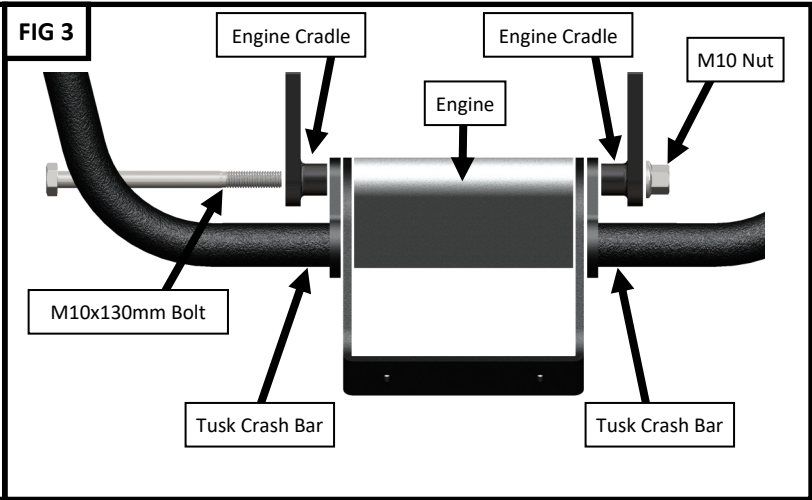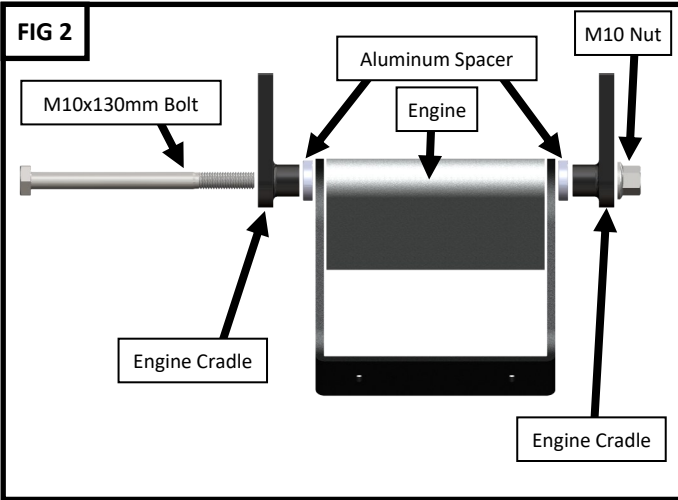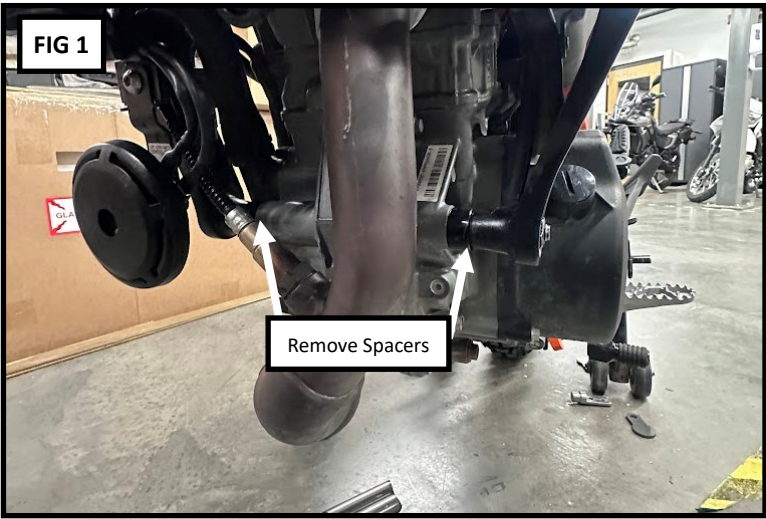

TUSK QUIET GLIDE ADVENTURE SKID PLATE PART NUMBER: 1975340021

4. The horn will need to be moved to fit around the skid plate. Remove the bolt holding the horn bracket. Remove the nut holding the bracket to the horn. Flip the horn bracket over and reinstall the nut. Reinstall on the bike. **FIG 4**
5. Optionally, the OEM rear skid plate mounting bracket can be removed.
6. Hold the **Rear Bracket** to the bike just behind the footpegs. Install using **(2) M8x16mm Hex Flange Bolt** to the factory threaded holes. **FIG 5, 6**
7. With both the front and rear brackets installed, hold the **Skid Plate** up to the bike. Use **(2) M6x16mm Flange Torx Bolts** to bolt the skid plate to the Front Bracket. Use **(2) M6x16mm Flange Torx Bolts** to bolt the skidplate to the Rear Bracket. **FIG 5, 6, 7**
8. Adjust the skid plate for best fit. Tighten all hardware.

Periodically check hardware for tightness.

Enjoy the use of your new
Tusk Quiet Glide Adventure Skid Plate!

