



POLARIS JBL RCA OUT HARNESS


PART #: UTVS-JBL-RC-RCA-OUT




MAKE SURE KEY IS IN THE "OFF" POSITION BEFORE MAKING ANY CONNECTIONS TO PREVENT DAMAGE TO YOUR ELECTRONICS!

INSTALLATION SHOWN ON POLARIS XPEDITION

PROCESS IS VERY SIMILAR FOR POLARIS RANGER 1500, THE JBL AMPLIFIER IS LOCATED IN THE DASH JUST LEFT OF THE STEERING COLUMN

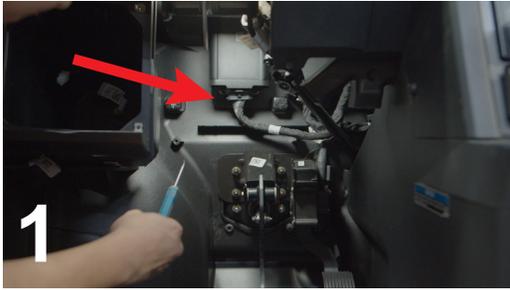


1
REMOVE THE OEM AMPLIFIER PLUG ON THE FACTORY 4-CH AMPLIFIER

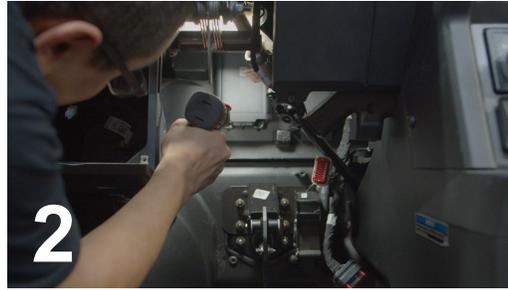


2
REMOVE THE 4 MOUNTING SCREWS FROM THE 4-CH AMPLIFIER




3
REMOVE THE AMPLIFIER FROM THE VEHICLE AND SET ASIDE

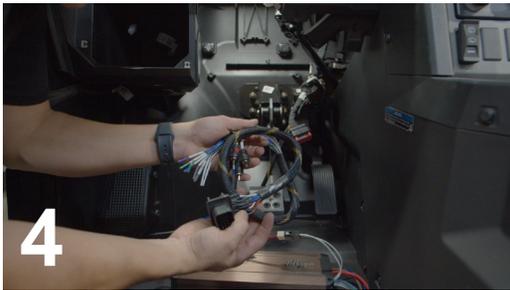


4
PREPARE THE JBL RCA HARNESS FOR INSTALLATION

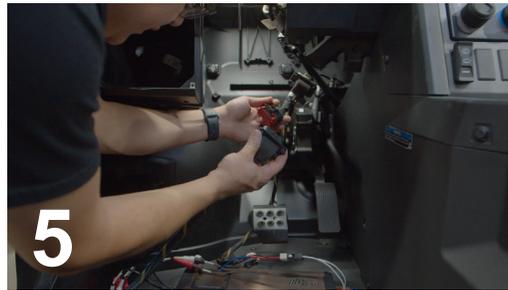


5
CONNECT THE HARNESS TO THE FACTORY 4-CH PLUG

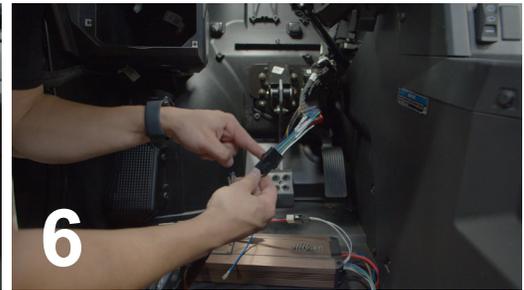


6
REMOVE THE UNIVERSAL PLUG CONNECTOR WHEN USING A UTV STEREO ELITE SERIES AMPLIFIER

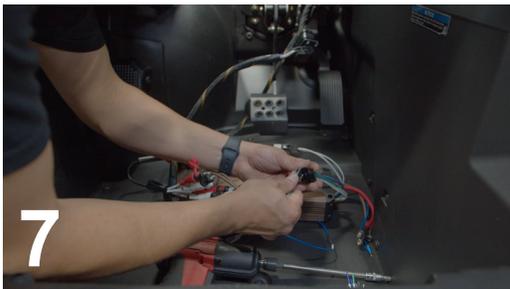

7
AFTER REMOVING THE UNIVERSAL END, PLUG THE STEREO CONNECTOR DIRECTLY INTO THE ELITE AMPLIFIER

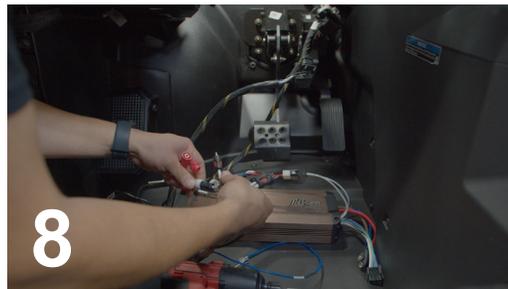

8
CONNECT THE RCA PLUGS, LABELED FOR CONVENIENCE

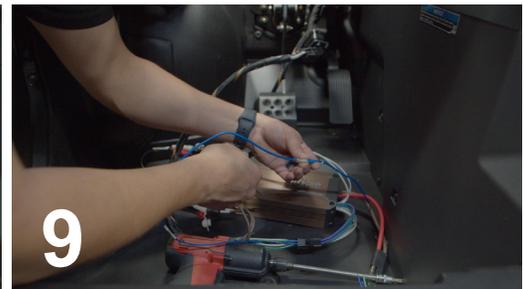

9
PLUG IN THE REMOTE WIRE


CONTINUE ON BACK



POLARIS JBL RCA OUT HARNESS

PART #: UTVS-JBL-RC-RCA-OUT

THE JBL RCA OUT HARNESS IS ONLY FOR THE FRONT & REAR CHANNELS. IF YOU WANT TO ADD A SUBWOOFER, YOU WILL NEED THE JBL SUB OUT HARNESS JBL SUB OUT HARNESSES **SOLD SEPARATELY*
PART# UTVS-JBL-RC-SUB-OUT FOR USE WITH POLARIS XPEDITION
PART# UTVS-RNG-RC-SUB-OUT FOR USE WITH POLARIS RANGER 1500

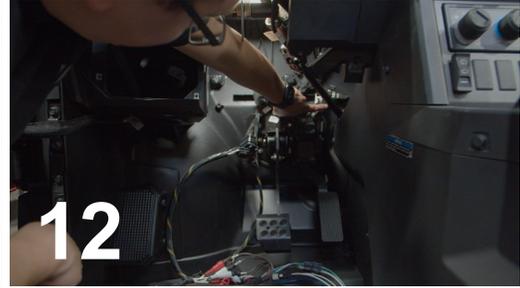


10
INSTALL AMPLIFIER MOUNTING PLATE TO FIREWALL IN FACTORY LOCATION (UTVS-XPD-AMPMT-FW shown, sold separately)

11
MOUNT THE AMPLIFIER TO THE MOUNTING PLATE

12
ROUTE AND SECURE THE HARNESS AWAY FROM ALL MOVING PARTS

WIRING DIAGRAM

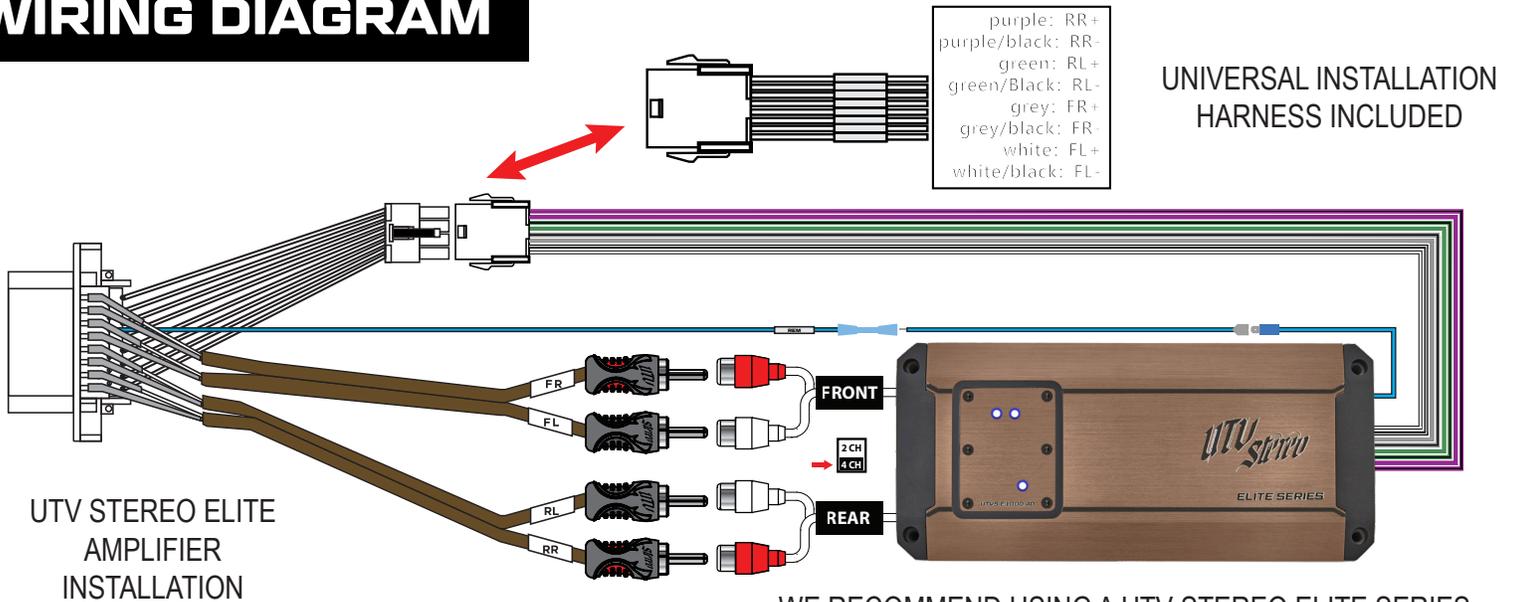

WATCH THE INSTALL VIDEO ON OUR YOUTUBE CHANNEL!



SCAN HERE!