



MAVERICK R

CAN-AM® MAVERICK R BIG BATTERY KIT

PART #: UTVS-R-BIG-BATT-KIT

FRONT SEAT REMOVAL



1 SLIDE SEAT FORWARD AND REMOVE BOTH BOLTS FROM FLOOR



2 REMOVE THE BOLTS FOR THE HARNESS LOCK MECHANISM



3 REMOVE BOLTS FROM SEAT MOUNT ON BOTH SIDES



4 LIFT SEAT UP TO GET TO THE BLACK SEAT BELT PLUG AND UNPLUG IT



5 REMOVE SEAT FROM CAR

BIG BATTERY KIT HARDWARE LIST:

BATTERY MOUNT HARDWARE



2X
COUNTERSUNK HEX
MACHINE SCREW



1X
BUTTONHEAD HEX
MACHINE SCREW



2X
FLAT WASHERS



1X
LOCK NUT

BATTERY HARDWARE




6X
FLAT HEAD HEX
MACHINE SCREW
VARIOUS LENGTHS



2X
SPLIT WASHERS



2X
FLAT WASHERS

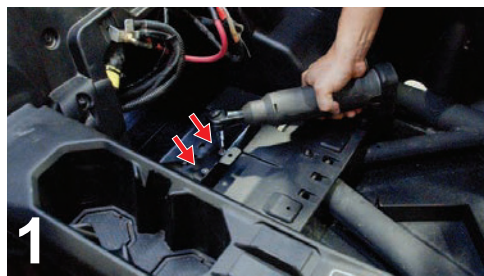


1 PLACE LOWER BRACKET INTO THE VEHICLE & USE THE TWO **COUNTERSUNK HEX SCREWS** TO SECURE IT



2 PLACE THE BATTERY IN THE VEHICLE



3 PLACE THE TOP BRACKET OVER THE BATTERY AND MAKE SURE THE HOLE ALIGNS WITH BOTTOM BRACKET

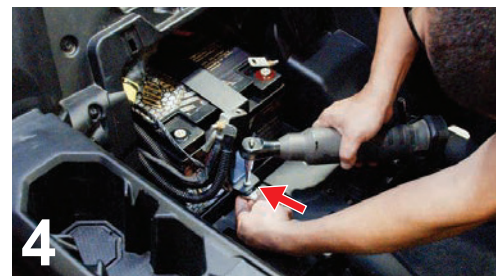

4 USE THE **BUTTONHEAD SCREW, 2 FLAT WASHERS, & LOCK NUT** TO CONNECT THE TOP & BOTTOM BRACKETS TOGETHER

CONTINUED ON BACK →



MAVERICK R

CAN-AM® MAVERICK R BIG BATTERY KIT


PART #: UTVS-R-BIG-BATT-KIT



5 USE THE APPROPRIATE LENGTH **FLAT HEAD HEX SCREW** WITH A **SPLIT & FLAT WASHER** TO CONNECT THE **NEGATIVE (-) LEAD** TO THE BATTERY



6 USE THE APPROPRIATE LENGTH **FLAT HEAD HEX SCREW** WITH A **SPLIT & FLAT WASHER** TO CONNECT THE **POSITIVE (+) LEAD** TO THE BATTERY

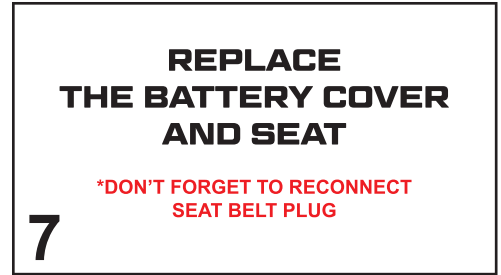

7 **REPLACE THE BATTERY COVER AND SEAT**

***DON'T FORGET TO RECONNECT SEAT BELT PLUG**

SCAN TO WATCH THE INSTALL VIDEO



**NEED HELP? EMAIL TECH SUPPORT AT:
INFO@UTVSTEREO.COM OR CALL: 480.616.2299**