



**POLARIS® RANGER  
SUBWOOFER OUTPUT HARNESS**

PART #: UTVS-RNG-RC-SUB-OUT



1

**PULL UP ON THE REAR DRIVER SIDE SEAT TO REMOVE THE BOTTOM HALF**



2

**REMOVE 4 BOLTS IN SEAT MOUNT AS SHOWN**



3

**REMOVE ENTIRE REAR DRIVER SIDE SEAT FROM CAR**



4

**REMOVE OEM PLUG SHOWN HERE**




5

**PLUG INTO THE SUBWOOFER HARNESS**



6

**MAKE CONNECTIONS TO AMPLIFIER**

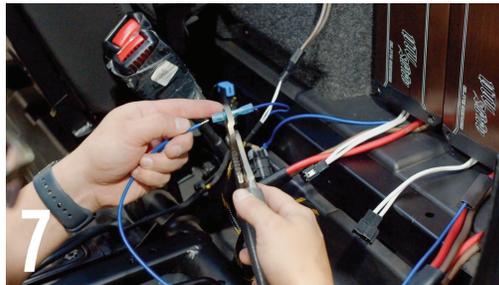

7

**CONNECT YOUR REMOTE WIRE AS SHOWN**