

CAN-AM X3 BIG BATTERY KIT

PART #: UTVS-X3-BIG-BATT-KIT

PARTS LIST:

UTV Stereo 1200 AGM Battery	x1
Battery Mounting Brackets	x2
Mounting Hardware:	
Bolts	x3
Washers	x4

RECOMMENDED PRODUCTS:



OR



Remove the 2 bolts under front passenger seat




Remove the 2 nuts located behind the seat




Lift the seat out of the vehicle



Remove the 2 bolts from the OEM battery bracket

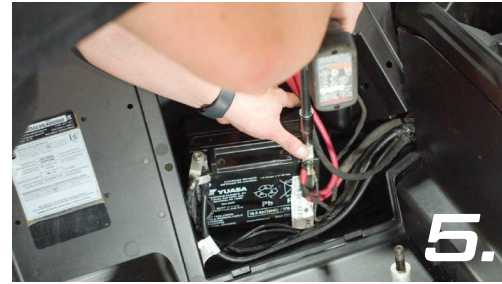


Undo the OEM battery connectors and remove the battery

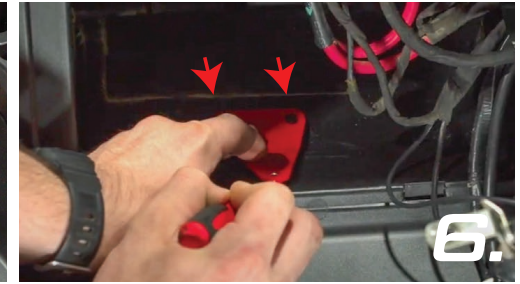

Line up the bottom bracket with the 2 holes from the OEM bracket and mark the 3rd hole as shown



Drill out the marked hole

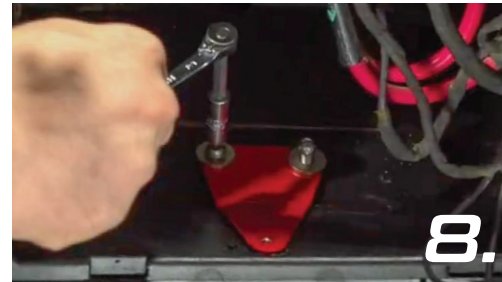

Align bottom bracket with the holes from steps 7 & 8


Use included hardware to secure



Place UTVS 1200 Big Battery into vehicle



Place the top bracket onto the battery and connect the brackets using the included bolt

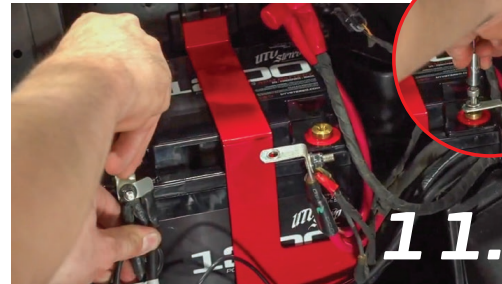

Make connections to battery



Completed install

Scan to watch the Installation Video!



We are here to help! Reach out to us at info@utvstereo.com or call us at 480.616.2299